N-001R-1 Replacement Copper Head

Specifications

• Size: 35×35mm (1.4"×1.4") • Weight: 190g / 6.7oz (Copper head and Spring pin) • Material: Head / Copper, Pin punch / Spring pin / Stainless steel

Precautions for exchanging the copper head

 Make sure the holes in the head and the body are firmly aligned before inserting the spring pin.
After exchange the copper head, please check that the head part is firmly fixed.

Instruction Manual: Ver 1.02

Set includes





Spring pin x1

■How to exchange the copper head

- ①Make a base to place the hammerhead.
- ②Please apply a pin punch to the spring pin on the head side and hit it with another hammer.
 - ③Replace the copper head, align the holes firmly, and hammer the spring pin a little at a time to the end.







N-001R-1 ペグ・ハンマーPro.C 交換用ヘッド

スペック

●サイズ:35x35mm●重量:190g(銅ヘッドと スプリングピン)●材質:ヘッド/銅、ピンパンチ・ スプリングピン/ステンレス

交換時の注意事項

●ヘッドと本体の穴をしっかり合わせてからスプ リングピンを打ち込んでください。●交換後、銅 ヘッドがハンマーにしっかり固定されたことを必 ず確認してください。

取扱説明書: Ver 1.02







■交換方法

- ①ハンマーのヘッドを置くベースを作ります。
- ②ヘッド側のスプリングピンにピンパンチを当て、別の ハンマーで叩いてください。
- ③銅ヘッドをつけ変え、穴をしっかりと合わせて、スプリン グピンを少しずつ最後まで打ち込んでください。



4cml/ F



