



取扱説明書 : Ver 2.00

TP-511

HDタープ“シールド” メーヴェ L



この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、キャンプ用のタープです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

△ 危険 明らかに生命にかかる重大な事故が予測される行為を示します。

- このタープの素材は難燃性ではありません。タープ下では燃焼式のランタンやコンロ、ヒーターなどの熱源や、マッチ、ローソク、ライター、タバコなどの裸火や炎は絶対に使用しないでください。限られた空間での火気の使用は火災や酸欠、一酸化炭素中毒などの恐れがあり、大変危険です。
- タープの下で燃料を保管したり、燃料を補給するなど、引火性のあるものを持ち込まないでください。

△ 警告 場合により重大な事故に至る行為を示します。


- ご使用の前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。
- 気象条件には常に細心の注意を払い、風の強い時や悪天候が予想されるときは速やかに撤収して安全な場所へ避難してください。
- 高温に加熱された物や発熱性のあるものを持ち込まないでください。天候によりタープ下は高温になり、熱中症などの危険があります。お子様昼夜など、細心の注意を払ってください。
- 風の吹き抜けるような場所や、雪崩、かけ崩れ、急な出水などの恐れのない地盤のしっかりとした水はけのよい平坦な場所を選んで設営してください。
- タープは表面積が大きく、体感風量よりはるかに大きな力を受けます。ご使用中はペグや張り綱がしっかりと繋がれているかどうかを定期的に点検してください。強風かではタープの使用を中止してください。

△ 注意 ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。


- 本製品は常設用ではありません。
- 日差しにより本体表面は低温やけどに発展するほどの高温になります。十分ご注意ください。
- 焚火や花火などのそばで組み立てたり、使用しないでください。火の粉を被り、生地に穴を開けてしまう場合があります。
- タープの素材は長時間日光にさらされた場合、退色や生地劣化などの強度低下を起こしますので、常設用として使用しないでください。
- 樹液が付着するときれいに除去することはできません。樹液が垂れそうな木下を避けて設営してください。溶剤などにより無理に除去すると生地やコーティングを痛めます。
- タープの設営・撤収の際は、風に飛ばされないようポールをしっかりと支え、ペグを確実に打ち込んでください。ポールが倒れたり、ポールの先端がハネ返るなどして思わぬ事故になりますので周囲の安全を確認してください。
- ペグとロープでしっかりとタープを固定してください。
- 薄い生地を使用していますので、生地を引っ張り過ぎると破損する恐れがあります。ご注意ください。
- 足もとの設営用ロープやペグにはご注意ください。足を引っかけて、思わぬ事故の原因となります。

セット内容


セット内容は一般的な条件下での設営を基本としたものです。基本的な設営にはタープ用ポール×3本、ペグ×10本が別途必要です。上記推奨サイズをご参考のうえ、ご用意ください。また、ペグやロープ自在は消耗品です。常に予備を携行することをお勧めします。




タープ本体



自在付ロープ
(二又用10m×3、二又用7m×1、3m×2)

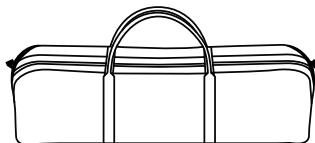

キャリーバッグ×1



ポールケース×1



ペグケース×1




取扱説明書(本書)×1

初めてお使いになる前に


- 品質には万全を期しておりますが、お使いになる前に必ず試し張りを行い、付属品や設営道具を確認してください。万一不具合や付属品の欠品があった場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。
- 本製品にはポール・ペグ・ハンマー等は含まれておりません。

□基本的な設営には別売りのウイングポール×3本、ペグ×10本が別途必要です。
下記の推奨サイズをご参考の上、ご用意ください。


□推奨ポール・ペグサイズ
240cmウイングポール×3本
打ち込み長さ25cm以上のペグ×10本(各コーナーのロープに使用)

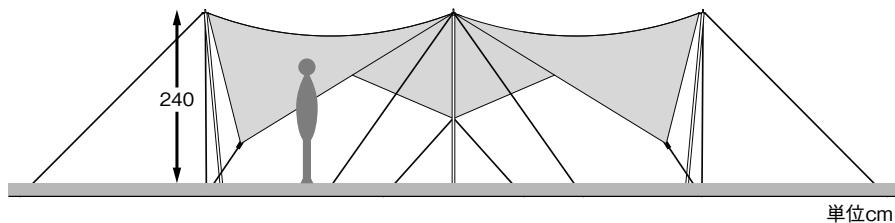



自在付ロープ・ペグダウンの位置

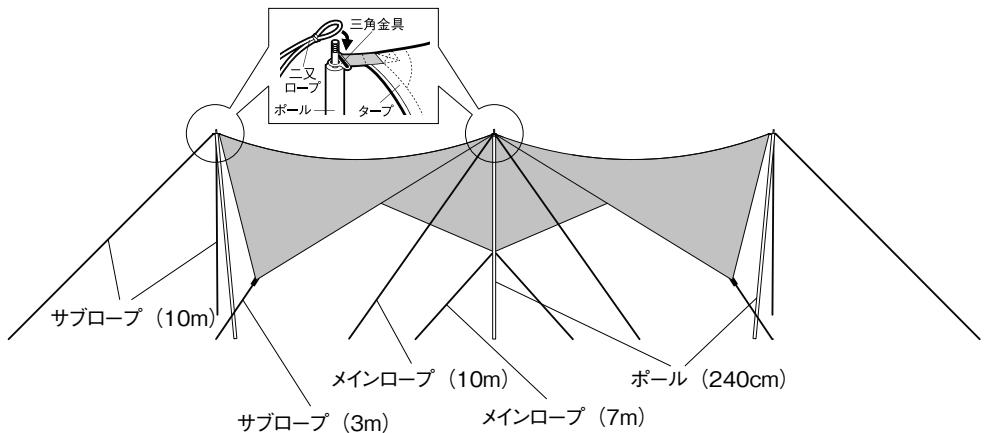

各ロープの固定、ベグダウンの位置は下図のように行ってください。

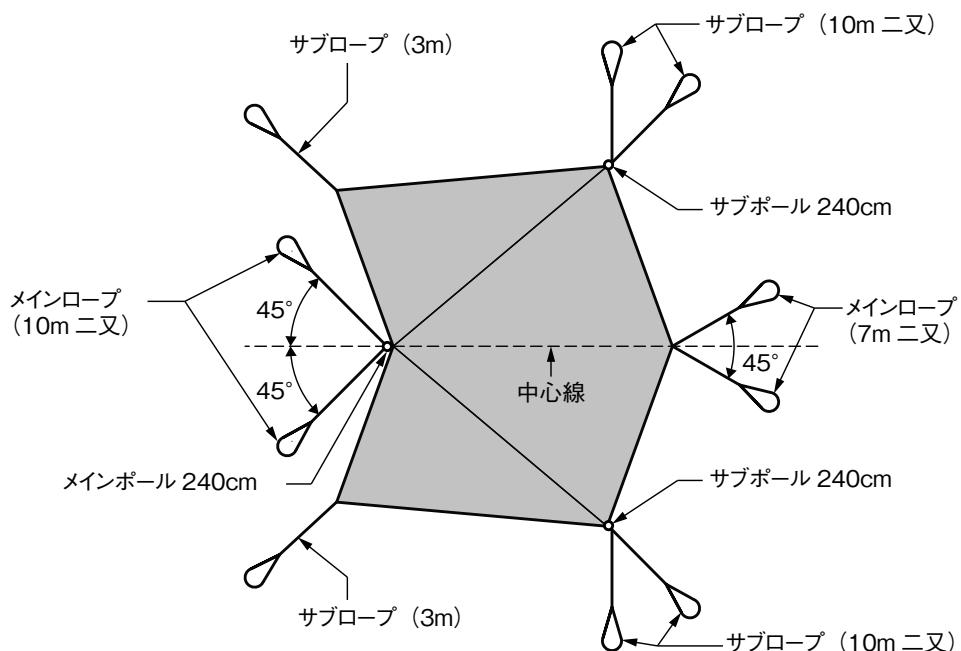

※メインポールとサブポールは、同じポールをご使用ください。

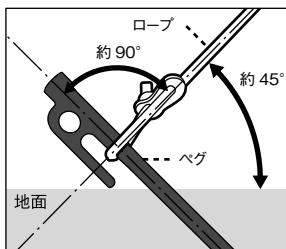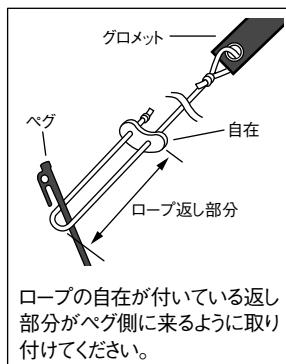

※二又用ロープのロープ間の角度が上から見て90°以上広い位置でベグダウンするウイングポールにテンションが伝わらず、正しく設営することができなくなりますので注意してください。

※ベグダウンはタープからできるだけ遠くに行ってください。設営したとき、ロープの角度が地面に対して約45°となるのが理想的なベグダウンの位置です。また、ベグを打ち込む角度はロープに対して90°になるようにベグダウンします。

設営の手順 より安全に設営するために必ず2人以上で設営してください。

設営・撤収は以下の説明に従い繰り返し練習し、実際のキャンプに備えてください。また、付属品が全て揃っているか前もってご確認ください。無理な設営・撤収は本体・ポールの破損や事故の原因になります。本書をよくお読みになりご使用ください。

① タープを地面に広げます。

ポールはあらかじめ組み立てた状態で240cmのものを3本準備してください。
タープ本体を平らな場所にロゴが上を向くように広げてください。


② ロープを取り付けます。

〔図A①〕の箇所にあるメインコーナーの三角金具にポールの先端を差し込み、その上からメイン用二又ロープ(10m二又)を掛けます。この時、ロープの返し部分は自在の位置を調整し、全て同じ長さにしてください。


〔図A②〕の箇所にメイン用二又ロープ(7m二又)を直接取り付けます。

※ポールは使用しません。


〔図 A〕

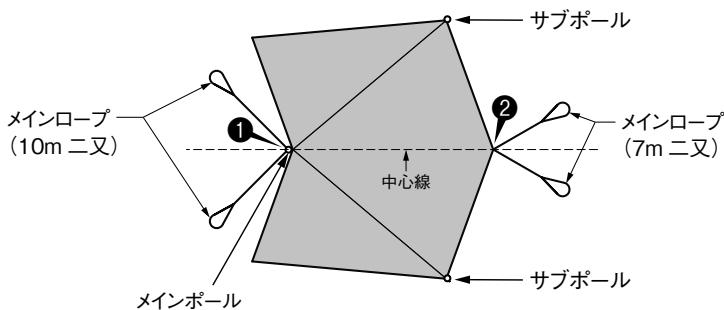

①の箇所

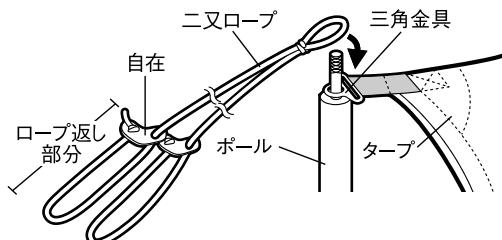

②の箇所

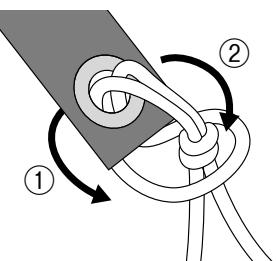


③ メインポールを立ち上げます。


メインポール【図A①】を立ち上げ、【図A】の①②を結ぶタープの中心線に対して【図B】のように外側に二又ロープを引き、ロープの返し部分にペグダウンします。【図D】

※それぞれのロープ間の角度が90°以上広い位置でペグダウンするとポールにテンションが伝わらず、正しく設営する事ができなくなるので注意してください。ペグダウンはタープからできるだけ遠くに行ってください。設営した時、ロープの角度がポールに対し45°以上になるのが理想的なペグダウンの位置です。【図C】
また、ペグを打ち込む角度はロープに対して90°になるようにペグダウンします。【図D】


〔図B〕

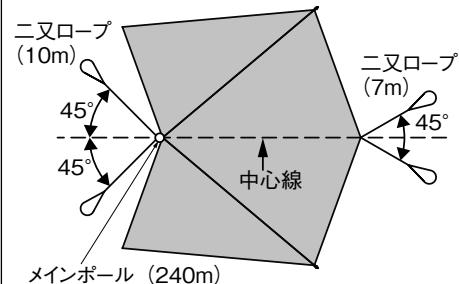

〔図C〕

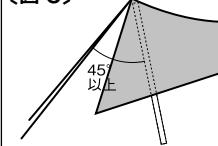

〔図D〕

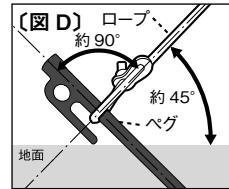


④ サブポールを立ち上げます。

手順②と同様、サブポール(240cm)の先端を三角金具に差し込み、その上からサブ用二又ロープ(10m二又)を取り付けてください。サブポールを稜線方向に立ち上げ、A、Bの順でロープを引きペグダウンします。【図E】

ポールの方向、ロープの角度、ペグダウンの位置は【図C】

【図D】に従ってください。もう片方のサブポールも同様にペグダウンしてください。

〔図E〕

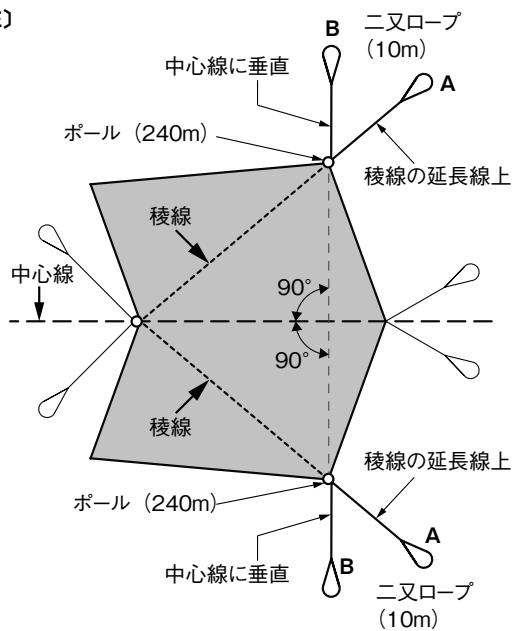


⑤ タープの稜線を緩めます。

ロープの自在の位置を調整し稜線部分を2割くらい緩めさせた状態にします。

※この緩みが完成時の美しい曲線を作ります。〔図F〕

〔図F〕

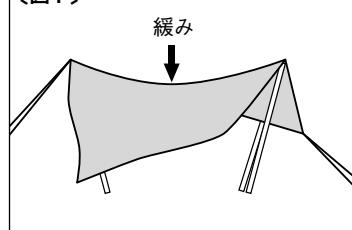


⑥ 各コーナーにロープを取り付けペグダウンします。

〔図G〕に示した位置にサブポール(3m)を取り付けてください。すでにペグダウンしているメイン用二又ロープ(10m二又)と並行になるようにサブロープ(3m)を引き、ペグダウンします。

※ロープの方向がずれると、シワの原因になり、正しく設営することができなくなりますのでご注意ください。

〔図G〕

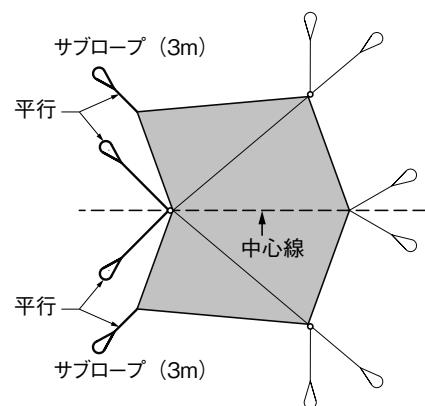


⑦ 各ロープのテンションを調節します。

〔図A〕の②の箇所が上に上がり過ぎている場合は、〔図H〕に従って自在の位置を調整して形状を整えてください。最後にすべてのロープをもう一度、均等に少しずつ引き、全体のバランスを整えます。


※ロープの引き過ぎにご注意ください。強く引き過ぎている場合は、その方向に大きなシワが発生します。

シワの出ているコーナーのサブロープを緩めて、全体のテンションバランスを調整してください。〔図I〕※タープが緩んだ状態や大きなシワの入った状態で使用すると、風を大きく受けて倒れたり、雨が流れず溜まってしまうなど、大変危険です。

〔図H〕

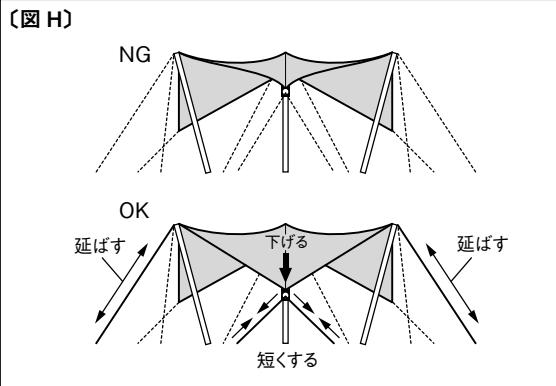

〔図I〕

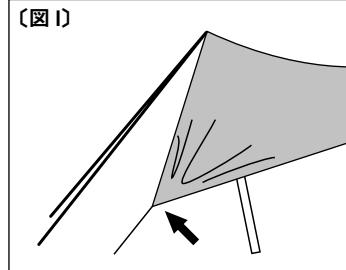


LEDランタンループの仕様

タープの中央には、指定のLED照明を吊るすためのランタンループが付いています。下記の対応機種をご確認のうえ、ご使用ください。【図J】

■対応機種

ES-070:ほおづき / ES-090:スポットほおづき / ES-041:たねほおづき

【図J】

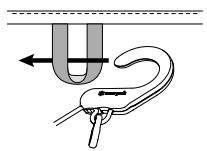

⚠️ **危険:**燃焼式のランタン等の熱を発生させる照明は、絶対に取り付けないでください。火災や思わぬ事故の原因となります。


⚠️ **注意:**対応機種以外のLED照明を取り付けないでください。ループに負荷が掛かり、製品破損の原因となります。

撤収の手順 必ず2人以上で撤収してください


タープの下とLEDランタンループにものがないことを確認してから撤収を始めてください。

- ① サブポール(240cm)を倒し、サブポールとサブロープ(10m二又)をタープから外してください。
- ② タープ本体のメインコーナー以外の各コーナーに取り付けているロープのベグを抜き、ロープを取り外してください。
- ③ メインポール(240cm)を倒し、メインポールとメインロープ(10m二又、7m二又)をタープから外してください。
- ④ タープを中心線に沿って二つ折りにした状態で地面に置き、キャリーバッグの長さに合わせてタープ本体を折りたたみ、キャリーバッグの中に入れてください。

[タープ本体のたたみ方]

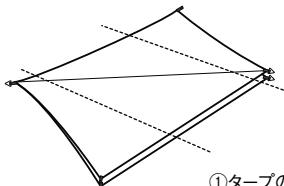


①タープの中央に向かい
両端を内側に折ってください。

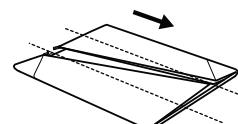

②縦に4つ折りし、矢印の
方向に卷いてください。

- ⑤ ウイングポールやベグはそれぞれ付属のポールケー
ス、ベグケースに収納してください。ポールやベグをむ
き出しの状態で収納するとタープ本体やインナールー
フの生地を損傷することがあります。
※ベグやロープの置き忘れにご注意ください。

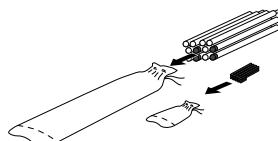

ケースへの収納

最初にポールをゆっくり倒し、先端金具とメインロープを外します。ベグを抜いて、それぞれのロープを束ねた後、キャリーバッグの長さに合わせてタープ本体を折りたたみ、キャリーバッグの中に入れます。ポールやベグはそれぞれ付属の専用ケースにポールの先端部が上になるように入れ、キャリーバッグに収納してください。むき出しの状態で収納すると本体生地を損傷することがあります。

結露について

空気中に含まれている水分が急激に冷やされて霧状になったものが結露として現れます。特に狭い空間では、通常の室内よりも水蒸気の濃度が高くなり、結露の発生する確率が高くなります。原因としては、人体構成要素の約60%を占める水分が呼吸や汗などにより放出され、水蒸気となり結露が発生します。特に防水性が高い部分に結露が発生しやすくなります。結露は優れた透湿防水素材でも使用状況により完全に防ぐことは不可能です。

撥水・防水性能について

- 本製品はいずれの生地にも高性能の撥水加工を施していますが、生地の特性上、撥水性能(撥水の仕方や耐久性)に若干の差が見られる場合があります。またご使用を重ねますと撥水性能が低下する場合があります。性能が低下した場合は市販の撥水スプレー等を、それらの説明書をよくお読みの上ご使用ください。
- 防水性の高い生地を使用しておりますが、地面の水溜まりなどへ長時間接触していると雨水が染み込む場合があります。
- 農薬などでPUコーティングが破壊され耐水圧が異常低下してしまう場合があります。この症状と診断された場合、製品の保証が出来なくなりますのでご注意ください。
- 撥水剤の影響によりロゴマークが剥離する場合があります。

紫外線の影響について

- 本製品の生地にUVカット加工を施しています。UVカット加工は、人体にとって有害な紫外線の透過を抑えると共に、生地の強度劣化を緩和します。
※UVカット加工は、紫外線による人体の影響や、素材劣化を防止するものではありません。

メンテナンス・保管

- 長期間ご使用しなかった製品を再度お使いになる際は、弊社ユーザーサービスまで点検を依頼してください。
- 本製品はポリエステル生地を組み合わせて使用しています。生地の特性を考慮し、出来る限り色移りし難い加工と配色パターンを採用していますが、保管状態などにより、色移りが発生する場合があります。ご了承ください。また、濡れたままの保管は避けてください。
- 濡れたまま保管すると、カビや悪臭、生地の色移り、生地の劣化などのトラブルの原因となりますので、ご使用後は風通しの良い日陰で十分に乾燥し、柔らかいブラシなどで泥汚れを落としてから保管してください。
- 高温多湿を避け、直射日光の当たらない風通しのよい場所に保管してください。
- 小さな生地の破損は市販のリペアテープで補修できます。補修の際はリペアテープの説明書をよくお読みください。
- ご使用により広範囲にわたり素材が劣化し、耐久度合いを超えたものは修理できない場合があります。
- 次回の使用に備え、張り綱などの付属品も含め、十分に保守、点検をしてください。
- シームテープはPUコーティングが傷まない程度の温度設定で圧着されていますが、使用を重ねるに従い剥離してしまう場合があります。剥離が確認された場合は、アイロンを低温に設定し、剥離箇所のみをサイド圧着してください。熱を掛け過ぎた場合、生地が変色したり劣化が促進されますのでご注意ください。シームテープは無理矢理剥離せないでください。PUコーティングが一緒に剥離された場合、修理できなくなる可能性があります。
- 樹液が付着してしまうときれいに除去することはできません。樹液が垂れてきそうな木の下を避けて設営してください。溶剤などにより無理に除去すると生地やコーティングを痛めます。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先をご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。

- | | |
|-------------------------|------------------------------|
| 1.素材の経年劣化による損害など商品の寿命 | 6.ゴミやさびによる故障 |
| 2.改造および粗雑な取扱いによる故障 | 7.分解したことによる不具合の発生または破損 |
| 3.取扱説明書で禁止されている取扱いによる故障 | 8.落下やその他の衝撃による部品の変形や破損による不具合 |
| 4.不測の事故による商品の故障 | 9.摩擦によるパーツの変化及びそれによる故障 |
| 5.その他製造上の欠陥以外による製品の故障 | 10.他社製品との組み合わせによる故障 |


修理について

- 本格的な修理が必要な場合は、お買い求めになった販売店または弊社ユーザーサービス係までお問合せください。
- 修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。
- 修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札をつけてください、また破損時の状況をできるだけ詳しく書いたメモを添えてください。
- 修理品の運賃並びに修理費については以下のように規定させて頂きます。
 - 1.保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。
 - 2.保証対象外の場合:往復運賃並びに修理費は、お客様のご負担とさせていただきます。

スペック

- 材質:本体/210Dポリエスチルオックス・遮光ピグメントPUコーティング耐水圧3,000mmミニマム・テフロン撥水加工・UVカット加工
- セット内容:タープ本体、自在付ロープ(二又用10m×3、二又用7m×1、3m×2)、ポールケース、ペグケース
- キャリーバッグサイズ:W78×18D×H21cm
- 重量:4.4kg

- 対応人数 6名

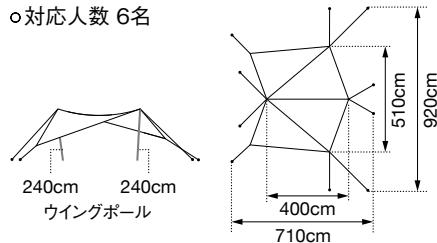

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。
スノーピークユーザーサービス
0120-010-660 (9:00~17:00)
E-mail:userservice@snowpeak.co.jp

株式会社スノーピーク

〒955-0147 新潟県三条市中野原456
tel:0256-46-5858 fax:0256-46-5860
www.snowpeak.co.jp

MADE IN CHINA

Product Manual : Ver 2.00

TP-511

HD Tarp Shield "Mawe"



Thank you very much for purchasing a Snow Peak product. This product is a tarp for camping. To use this product safely and correctly, please carefully read these instructions. After reading these instructions, keep this manual in a safe place for future reference. If you find anything in the instruction manual that is difficult to understand or find a defect with the product, stop using it immediately and contact the dealers where the product was purchased or Snow Peak Customer Service.

Safety Precautions: Before use, please read thoroughly to ensure safety and to avoid accidents.

⚠ DANGER Misuse could easily result in a serious accident or death.

- The material of this tarp is not flame-proof. Do not use combustion-based heat sources such as lanterns, stoves, or heaters, or open flames such as matches, candles, lighters, or cigarettes, inside the shelter. The use of such heat or light sources inside a small enclosed space is hazardous and may result in fire, oxygen deficiency, or carbon monoxide poisoning.
- Do not bring flammable materials for storing or refilling fuel under the tarp.

⚠ WARNING Improper use may result in death or serious injury.


- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- Pay close attention to the weather. If extreme weather is in the forecast, pack up camp and evacuate to a safe place.
- Do not bring heated items into the tent when they are at high temperatures. The temperature under the tarp will be high during warm weather, and there is a risk of heatstroke. Pay close attention to the temperature, particularly when children are asleep inside the shelter.
- Choose a flat, well-drained area with firm ground to pitch the tarp. Choose a place with no chance of avalanches, landslides, wind gusts, or sudden flooding.
- Tarps have a large surface area and absorb more wind force than you may realize. Please regularly check to ensure the pegs and ropes are firmly connected. Do not use the tarp in the strong wind.

⚠ CAUTION Misuse could result in injury to the user and/or property damage.


- This product is not intended to be in permanent use. If the tarp is left in the sun for long periods, the materials may fade in color, or the fabric may deteriorate and lose strength. Do not leave the shelter set up permanently.
- Sunlight can cause the surface of the shelter to heat up, potentially causing low-temperature burns.
- Do not assemble or use the shelter close to a bonfire, fireworks, etc. Flying sparks can create holes in the fabric.
- Please do not leave the tarp set up permanently, as weather conditions and sunlight may cause a loss of strength, fading or fabric deterioration.
- Sap is difficult to remove. Please avoid setting the tarp up under trees where the sap might drip. Using a solvent to remove sap will damage the fabric and coating.
- Firmly hold the tarp when assembling and disassembling. Unexpected accidents may occur due to the pole ends recoiling, etc., so ensure that the surroundings are safe, with no other people in the vicinity. Always assemble/disassemble this product with two or more people.
- Firmly secure the pegs, guy lines, etc.
- Because this product uses a thin fabric, it may break if you pull the fabric too much.
- Please pay attention to the rope and pegs at your feet. You may catch your foot and fall, leading to an unexpected accident or injury.

Set Contents


The included contents are designed for set up in normal conditions. A basic setup requires three poles and ten pegs; all sold separately. Please refer to the recommended size listed. The pegs and the flexible ropes are replaceable items that will wear out over time, so it's best to carry a spare




Tarp



Rope with Rope Tensioner
(Forked 10m(32.8') x 3, 7m (22.8')x 1, 3m(9.8')x 2)

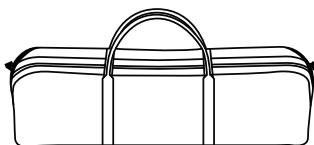

Carry Bag Carry Bag x 1



Pole Case x 1



Peg Case x 1



Instruction manual x 1

Before using for the first time

●Please check that all accessory items are included before attempting to assemble the product—practice assembling and handling the product in a safe location before using it while camping. In the unlikely event that there is a problem or a missing accessory, please contact the dealer where you purchased the product or Snow Peak Customer Service.

●This product does not include pegs and hammers for ropes.


A basic setup requires three poles for tarps and ten pegs sold separately.

Please use the following recommended sizes.


Recommended Pole Size

240 cm(7.9') x 3


Ten pegs with a length of 25 cm (9.45") or more.

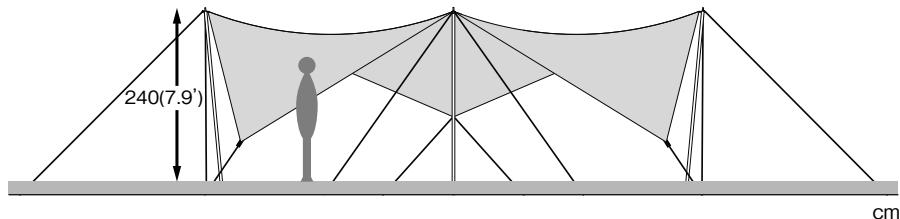



Location of Rope with Rope Tensioner and Pegs

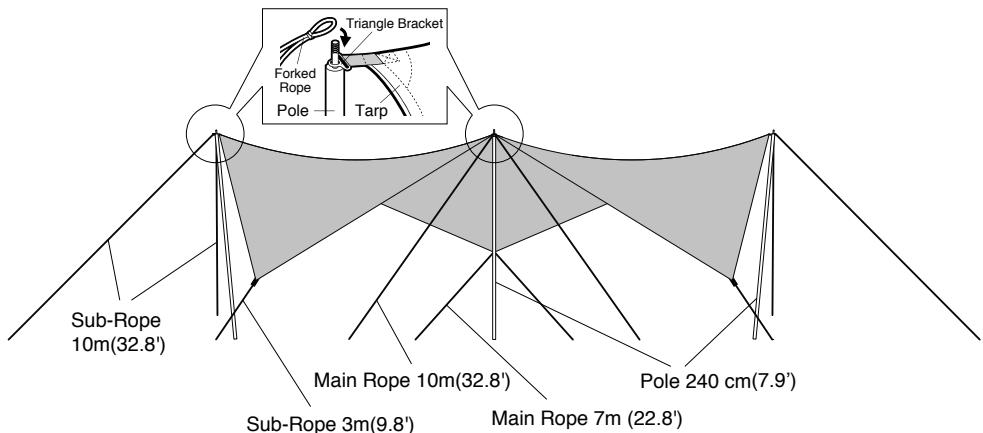

Fix the rope and peg down, as shown below.

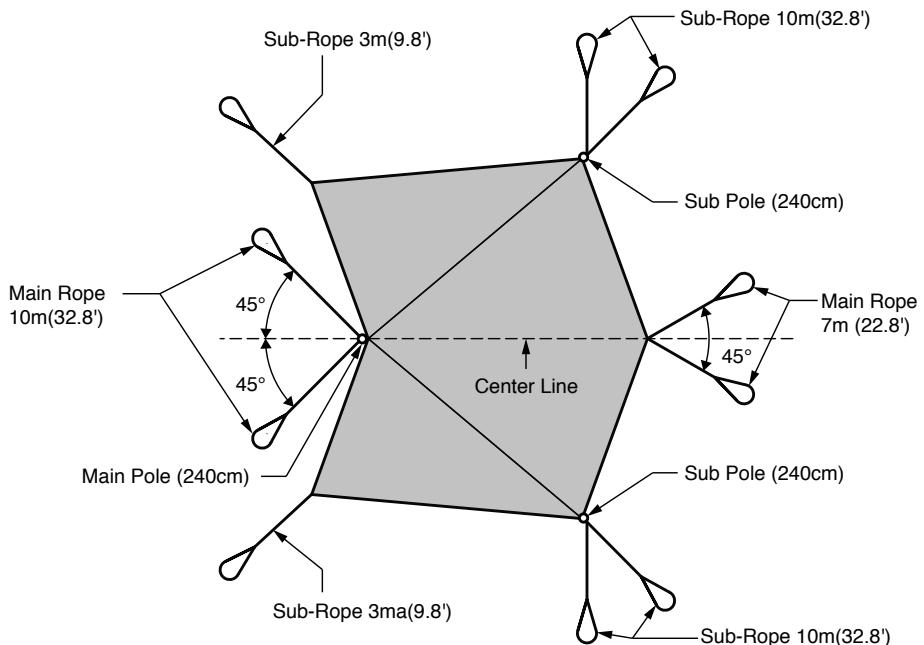

* The same kind of pole can be used for the main pole and sub pole.

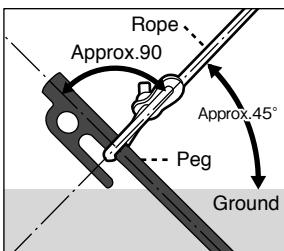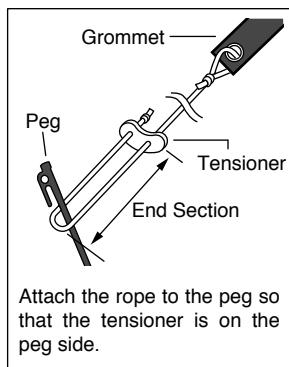

* Please note that if you peg down the forked rope at an angle of more than 90°, the tension will not be transmitted to the wing pole, resulting in an unstable setup.

* Insert the peg as far as possible from the tarp. The ideal peg position is when the rope is angled 45° to the ground. Be sure to insert the pegs at a 90° angle to the rope.

Setup Procedure: Make sure that two or more people take part in the setup.

Follow the instructions below to set up and disassemble. Practice set up before camping and ensure all the accessories are functioning. Excessive assembly and tear down may damage the body or poles, potentially resulting in an accident. Please read this manual carefully before use.

① Spread the tarp on the ground.


Prepare and assemble three poles of 240 cm in length. Spread the tarp on a flat surface with the logo facing up.

② Attach the rope.


Insert the tip of the pole into the triangle bracket of the main corner at [Figure A①], and hang the center loop of the main forked rope (10m forked) from above. At this time, position the adjustable part of the rope and make them all the same length.

Attach the main forked rope (7m fork) directly to the tarp as shown on [Figure A ②].* Don't use a pole.


[Figure A]

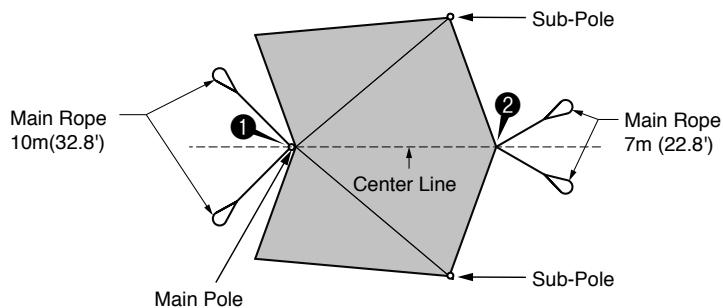

at ①

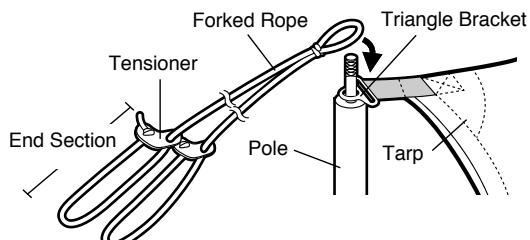


at ②

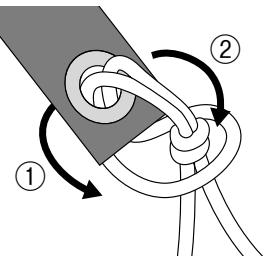

③ Raise the Main Pole.

Raise the main pole [**Figure A ①**], and pull the forked rope towards the outside from the centerline of the tarp, connecting ① and ② in [**Figure A**] as shown in [**Figure B**]. Then peg down the end sections. [**Figure D**]


[**Figure B**]

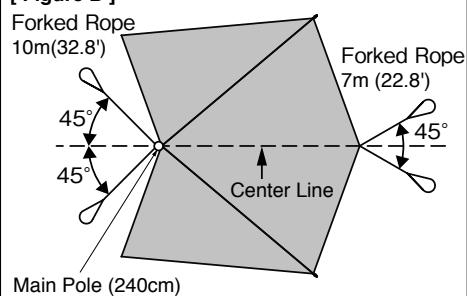


* Please note that if you peg down the rope at an angle of more than 90°, tension will not be applied to the pole, resulting in an unstable setup.

* Insert the peg as far as possible from the tarp. The ideal peg position is when the rope is angled 45° to the ground. [**Figure C**] Insert the pegs at a 90° angle to the rope. [**Figure D**]

[**Figure C**]

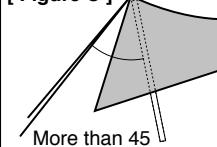

[**FIG. D**]

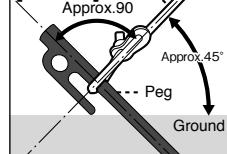


④ Set Up the Sub-Pole.

In the same way as step ③, insert the sub-pole's tip into the triangle bracket, and attach the sub-pole forked rope (10m fork) to it. Raise the sub-pole in the direction of the tarp's edge, pull the rope in the order of A, B, and peg down. [**Figure E**]

Follow [**Figure C**] and [**Figure D**] for the direction of the pole, the angle of the rope, and the proper location for the peg. Peg down the other sub-pole as well.

[**Figure E**]

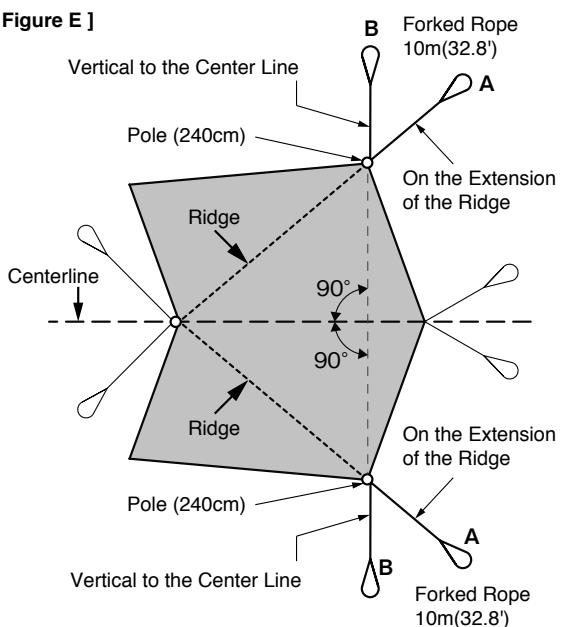


⑤ Loosen the Ridge of the Tarp.

Adjust the position of the tensioner on the 10m rope, loosening it by about 20%.

* This looseness creates a beautiful curve. [**Figure F**]


[**Figure F**]

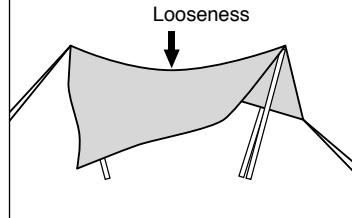

⑥ Attach the Rope to Each Corner and Secure with a Peg.

Set the sub-rope (3m) at the position shown in [**Figure G**]. Pull the sub-rope (3m) so that it's parallel to the main forked rope (10m fork), then peg down.*Be aware that if the rope is pulled in the wrong direction, it may cause wrinkles and prevent proper setup.

[**Figure G**]

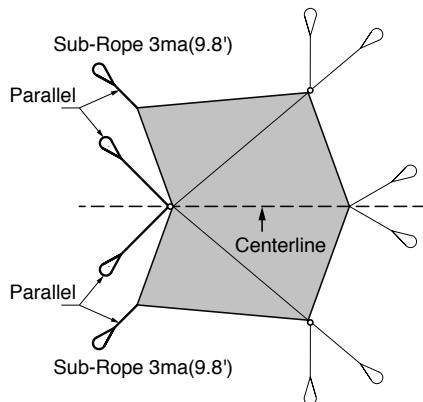


⑦ Attach the Rope to Each Corner and Secure with a Peg.

If ② in Figure A is too high, adjust the position of the rope tensioner according to [**Figure H**]. Finally, pull all the ropes again, little-by-little, to balance the whole tarp.


* Please be careful not to pull the rope too much. If it is pulled too much, a big wrinkle will appear in that direction. Loosen the sub-rope at the wrinkled corner to adjust the overall tension. [**Figure I**]

* It's dangerous to use the tarp when it's loose or has large wrinkles, it may fall down due to a strong wind, or the rain will accumulate.

[**Figure H**]

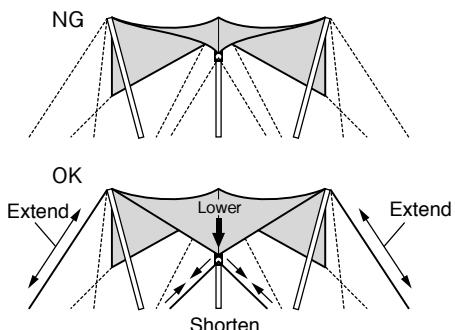

[**Figure I**]

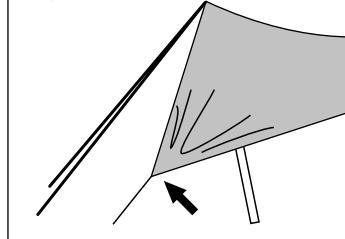


Using the LED Lantern Loop

At the center of the tarp, there is a lantern loop to hang the designated LED lighting. Check the following models before using them. [**Figure J**]

■ Compatible models	ES-070 : HOZUKI LIGHT ES-090 : SPOT HOZUKI ES-041 : MINI HOZUKI
---------------------	---

[**Figure J**]

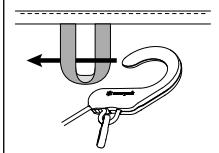

DANGER: Never install lighting that generates heat, such as gas-powered lanterns. They may cause a fire or an unexpected accident.


CAUTION: Do not install any LED lights other than the compatible models. This may overload the loop and damage the product.

How to Disassemble: Please be sure to disassemble with two or more people.


Make sure there is nothing under the tarp and the LED lantern loop before disassembling.

- ① Pull down the sub-pole (240 cm) and remove the sub-pole and sub-rope (10m forked) from the tarp.
- ② Remove the rope from the pegs attached to each corner, except for the main corner of the tarp.
- ③ Tilt the main pole (240 cm) and remove the main pole and main rope (10m forked, 7m forked) from the tarp.
- ④ Fold the tarp in half, place it on the ground and fold according to the carry bag's length, then place it in the carry bag.

[How to fold the tarp]

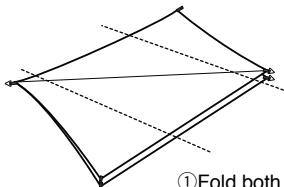


① Fold both ends inward to the corners, as marked.

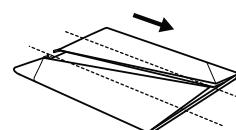

② Fold it in three vertically, then roll it in the direction of the arrow.

- ⑤ Store the wing poles and pegs in the wing pole case and peg case. Leaving the poles or pegs outside of the case may damage the tarp.
* Please be careful not to leave pegs or ropes behind.

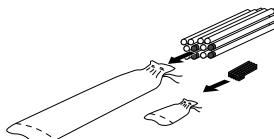

How to Store in the Carry Case

First, tilt the pole slowly and remove the rope from the tip of the pole. After pulling out the pegs and bundling each rope, fold the tarp according to the carry bag's length and put it in the carry bag.

Put the poles and pegs in the attached case with the pole's tip facing up, and store it in the carry bag. Leaving the poles or pegs outside of the case may damage the tarp fabric.

Regarding Condensation

Mist is a collection of water droplets suspended in the air that turns into condensation in rapidly falling temperatures. In small spaces, water vapor concentration is higher than in a normal room, and the probability of condensation is higher. Moisture, which makes up about 60% of the human body, is released through respiration and perspiration and becomes water vapor, causing condensation. Dew condensation is especially likely to occur in areas with high water-resistance. Depending on the surrounding conditions, it may be impossible to avoid condensation completely, even with waterproof materials. To reduce condensation, allow steady ventilation while the tent is in use.

Water-Repellent and Waterproof Functions

- The fabric of the tarp is treated with a high-quality, water-repellent finish. However, the level of water-repellent capacity and durability may vary slightly due to the characteristics of each material. The water-repellent finish will lose effectiveness after repeated use. When the water repellence decreases, please use a water-repellent spray purchased from your local outdoor gear retailer. When using such sprays, please follow the product's instructions.
- Although this product is made of highly waterproof fabric, rainwater may soak into it if it's in contact with water pools on the ground for a long time.
- The PU coating may be damaged by agricultural chemicals, which cause the water pressure resistance to decrease abnormally. Please note that the product cannot be subject to warranty if damaged by agricultural chemicals.
- The logo may peel off due to the effect of the water-repellent agent.

Regarding the Effect of Ultraviolet Rays

- A UV protection treatment has been applied to the material of the shelter.

*The UV protection treatment does not completely shield humans from ultraviolet rays or stop the deterioration of the material's strength.

Maintenance and Storage

- When using a product that has been in storage for a long time, please contact Snow Peak Customer Service.
- A polyester fabric blend is used for this product. Considering the material characteristics, we adopted processing and color patterns that will result in less color migration. However, depending on storage conditions, slight color migration may occur. Do not store the product while it is wet.
- Before storage, the product should be cleaned and dried sufficiently. If the product is stored when wet, the build-up of mold, bad odors, color migration, and material deterioration will occur. Dry the product sufficiently in a ventilated and shaded area and clean the surface with a soft brush before storing.
- Please store in a well-ventilated area away from direct sunlight, high temperatures, and humidity.
- Small areas of fabric damage can be fixed with repair tape. Please read the repair tape manual carefully before applying.
- Depending on the conditions during use, the tent material may deteriorate over a wide area, losing its durability and becoming irreparable.
- In order to prepare for the next use, please check and maintain the product (including all accessories such as the pegs).
- Seam tape is pressure-capped at a temperature setting that prevents damage to the PU coating. However, it may peel off as it is used repeatedly. If peeling is found, set an iron at a low temperature and reattach only the peeling sections. Be aware that excessive heat will discolor or accelerate the deterioration of the fabric. If the PU coating peels off completely; it may be impossible to repair.
- Sap cannot be easily removed. Do not set up this product under trees that frequently drop sap. If the sap is forcibly removed with a solvent, etc., the fabric or coating may be damaged.

Quality assurance

The specifications of Snow Peak products are determined based on field testing and quality control, ensuring every product's proper function and longevity. If apparent defects in the product's manufacturing are found, the defective product will be repaired or exchanged free of charge. Damages, as follows, are not covered under warranty.

1. Damage caused by normal aging of materials.
2. Damage caused by modifications or rough handling.
3. Failure due to improper handling described in this manual.
4. Damage caused by unforeseen accidents.
5. Damage not caused by defects in the manufacturing process.
6. Damage caused by dust or rust.
7. Damage or defects caused when dismantling the products.
8. Damage and defects caused by dropping or other shocks to the products.
9. Defects, breakage, or deterioration of replaceable parts.
10. Damage caused by the use of the product in combination with other maker's products.


Regarding Repair

- If a professional repair is necessary, please contact the dealer where the product was sold or Snow Peak Customer Service.
- Please dry and clean the product before sending it for repair.
- Please stick a memo onto the damaged area of the product. In the memo, include details explaining the circumstances that led to the damage.
- The cost of repair will be determined as follows:
 1. If the damage is subject to warranty, Snow Peak will cover transportation cost (both ways) and repair cost.
 2. If the damage is not subject to warranty, transportation cost (both ways) and repair cost will be covered by the customer.

Specifications

- Material : Tarp / 210D Polyester Oxford, Light-Shielding Pigment PU coating Waterproof rating: 3,000mm minimum, Teflon water-repellent finish, UV protection treatment
- Carry Bag Size : W78 x 18DxH21cm (W30.7" xD7.1" x H8.3")
- Weight : 4.4 kg /9.7 lb

- Capacity: 6 persons

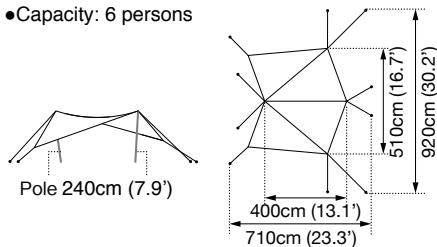

Snow Peak USA, Inc.

404 NW 23rd Ave., Portland, OR 97210, USA

Tel. +1 (503) 461-0781 IG: @snowpeakusa

www.snowpeak.com

MADE IN CHINA