


FES-029 スノーピークコット ハイテンション ブラック

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、折り畳み機能を有する一人用簡易ベッドです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容 (各部の名称)

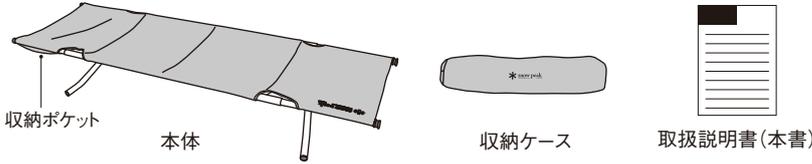

スペック

- 材質: 本体フレーム/アルミニウム、サイドフレーム/ステンレス、座布/ポリエステル600D・PVC加工、ポケット/ポリエステル・ナイロン・ポリウレタン、収納ケース/ポリエステル600D・PVC加工
- サイズ(収納時): 1,250×165×145 (h) mm (使用時): 2,000×650×320 (h) mm
- 重量: 7.3kg
- 耐荷重: 収納ポケット小/700g、収納ポケット大/1kg

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

- ランタンやバーナー・焚き火などの火気や、高温の物付近で使用しないでください。生地が燃え、火災の原因となります。

⚠ 警告 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します。


- 乳幼児や小さなお子様をご使用する場合、露出している金属部品に顔や体の一部が接触することがあります。金属部品が肌に触れぬように保護してください。●本製品使用中は、必ず大人の管理の下で注意しながらご使用ください。転倒や落下などの思わぬ事故につながるおそれがあります。●本製品は構造上、本体端部に脚がありません。端部に座り体重をかけると反対側が持ち上がり、転倒する場合がございます。本製品に腰を掛ける際には、本体中央に座り、端部に偏った荷重をかけないようにご注意ください。●本製品の上で立ち上がった時、浅く腰掛けたり、座面から体を乗り出すなど、無理な姿勢で使用しないでください。転倒し、怪けにつながるおそれがあります。

⚠ 注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。


- 本製品は可動部が多くあります。組立て・収納作業の際にはゆっくり確実に、指などを挟まぬよう十分にご注意ください。
- 地盤のしっかりとした平坦な場所を選んでご使用ください。傾斜地や凹凸のある場所でご使用すると、破損や転倒につながるおそれがあります。また、テント内でご使用の場合は、テントのボトムの下に石などの硬いものが無いことを確認してください。テントボトムの破損につながるおそれがあります。
- 本製品は構造上、脚が稼働し地面と擦れる場合があります。テントのボトムや床などを傷つけるおそれがありますので、テント内や室内でご使用する場合は別売りの「床面保護カバー (BD-030C)」をご使用してください。
- ご使用によりシート素材に伸びが発生し、シート高が低くなる場合があります。
- ご使用により収納ポケット素材に伸びが発生する場合があります。
- 収納ポケットにカメラなどの精密機器や硬く尖ったもの、カイロなどの発熱するものは入れないでください。怪我や製品の破損、他の財産の破損が考えられます。
- ポケットに物が入った状態で展開、収納を行わないでください。製品、他の財産の破損

や変形につながるおそれがあります。

- 本製品に急激な衝撃がかかるような座り方・乗り方、あるいは本製品を激しくゆすぶるなどしないでください。破損や変形につながるおそれがあります。
- 移動時・運搬時に強い衝撃を与えると破損や変形につながるおそれがあります。
- 夏場など、直射日光の当たる場所では、露出した金属部品が熱くなります。低温火傷につながるおそれがありますので、ご使用の際は十分ご注意ください。
- 以下の様な使用方法または行為を行わないでください。
 - ①スライドフレームが図のような収納状態のまま座るなど、物を置かないでください。シートの一部だけに荷重がかかり破損につながるおそれがあります。ご使用の際は必ずスライドフレームを引き出し、シート全体を広げた状態でご使用ください。
 - ②スライドフレームを勢いよく引き出すなど、強い力で押し込まないでください。スライドフレームのストッパーが破損し、抜けなくなるおそれがあります。

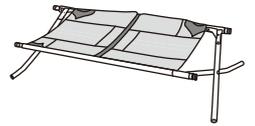

設営・収納方法 周りに人や物がいないか必ず確認の上行ってください。収納は設営の逆の手順で行ってください。

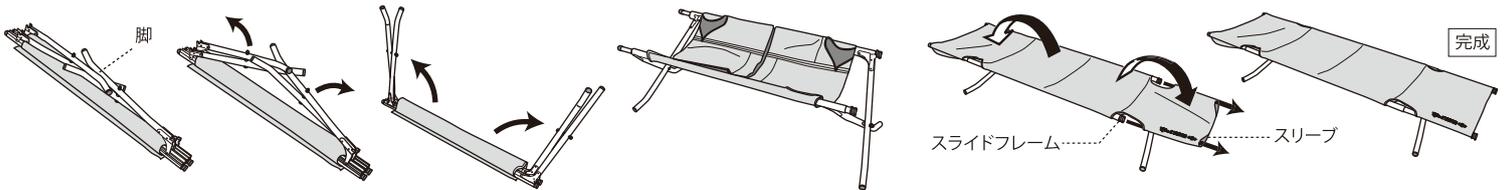

- ①交差した脚が上になるように置きます。次に左右の脚を同時に持ち上げるように開きます。脚は「逆ハの字」になるように止まるまで大きく開きます。
- ②交差した脚が開くように、本体フレームを開き、正立させます。
- ③内側に折りたたまれたシート両側を開き、本体フレーム内部に収納されたスライドフレームを伸ばしながら、シートのスリーブに通します。シートがややたるんだ状態で行くとスムーズに通すことができます。スライドフレームは止まるまでいっぱい伸ばしてください。

メンテナンスについて

- ご使用後は製品に付着した汚れや水分を取り除き、十分に乾燥させてから保管してください。汚れを取り除く際は中性洗剤を含ませたやわらかい布で軽く拭き取ってください。また、拭き取った後は十分乾燥させてください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。1.素材の経年劣化による損害など商品の寿命 / 2.改造および粗雑な取扱いによる故障 / 3.取扱説明書で禁止されている取扱いによる故障 / 4.不測の事故による商品の故障 / 5.その他製造上の欠陥以外による製品の故障 / 6.ゴミやさびによる故障 / 7.分解したことによる不具合の発生または破損 / 8.落下やその他の衝撃による部品の変形や破損による不具合 / 9.摩擦によるパーツの変化及びそれによる故障 10.他社製品との組み合わせによる故障

修理について

- 本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。●修理品の運賃並びに修理費については以下のように規定させていただきます。1.保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。/ 2.保証対象以外の場合:往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピークユーザーサービス

☎ 0120-010-660 (9:00~17:00)

Email: userservice@snowpeak.co.jp

株式会社スノーピーク


〒955-0147 新潟県三条市中野原456

Tel. 0256-46-5858 / Fax. 0256-46-5860

www.snowpeak.co.jp

Thank you for purchasing a Snow Peak product. This product is a one-person cot with foldable legs for easy storage. Please read this instruction manual before using it and keep it for future reference. Please confirm all components and set up instructions before using. If you are not clear on any point, contact your local Snow Peak dealer before use.

Contents Included (Name of Parts)

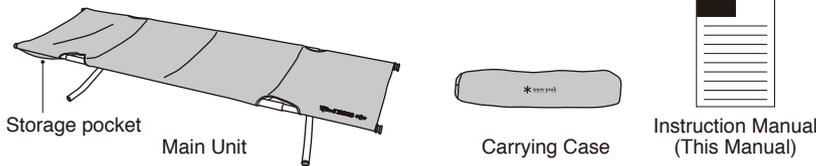

Specifications

- Material / Main Unit Pole: Aluminum, Side Pole: Stainless Steel, Seat: Polyester 600D / PVC Processed, Pockets: Polyester, Nylon, Polyurethane, Carrying Case/Polyester 600D / PVC Processed
- Stowed: 1,250×165×145(h)mm / 49.2"×6.5"×5.7"
- Size: 2,000×650×320(h)mm / 78.7"×25.6"×12.6"
- Weight: 7.3 kg / 16.1 lbs
- Load bearing capacity: Storage pocket small 700g / 1.5lbs, Storage pocket large 1kg / 2.2lbs

Safety Precautions: Read the following instructions thoroughly to ensure safe and proper usage.

⚠ DANGER / Incorrect handling may result in death or serious injury to the user.

- Do not use this product near a heat source such as a lantern, burner, or open flames such as bonfires. The seat cloth may catch fire and cause burns if the product is used near a heat source or open flames.


⚠ WARNING / Misuse could result in serious injury or death to the user.

- The exposed metal parts on this product may be hazardous to children. Please use caution to ensure they do not hit their head or body on the metal parts.
- Ensure this product is used under adult supervision to avoid unexpected accidents, such as falls.
- Due to the structure of this product, there are no legs at the end of the body. If you sit on the edge, the opposite side will rise, and you may fall over. When you sit on this product, please sit in the center and not the edges.
- Please do not stand, lean to one side, or sit lightly on this product. Improper use may cause you to fall or injure yourself.


⚠ CAUTION / Indicates actions that may lead to injury, damage to the product, or damage to other items.

- When setting up and disassembling, be careful with the folding legs to avoid pinching your hand or fingers. Open and close the legs slowly.
- Place the product on stable ground and not on sloped or uneven ground. A rough surface may increase the risk of falls or injury. Also, when using inside the tent, please check to ensure there are no hard objects such as stones under the tent. Sharp objects may lead to damage to the bottom of the tent.
- Due to the structure of this product, the legs may rub against the ground. The rubbing may damage the floor of the tent. When using this product in a tent or a room, use the "Leg Cover for High Tension Cot" (BD-030C) for floor protection. Please note this product is sold separately.
- The seat material may stretch, and the seat height may decrease.
- The material of the storage pocket may stretch with use.
- Do not put cameras or other delicate devices, hard, sharp objects, or items that generate heat, such as body warmers, in the storage pockets. Injury, product damage, or damage to other property may occur.
- Do not unfold or store the product with objects in the pockets. Doing so may

- result in damage or deformation of the product or other property.
- Avoid shaking or bouncing while sitting or lying on this product to prevent damage.
- When transporting this product, strong jolts may lead to damage.
- In addition, the exposed metal parts will get hot when exposed to direct sunlight on hot days. There is a risk of low-temperature burns, so please be careful during the summer months.
- Please do not use or act as follows.
 - ① Sit with the slide poles in their stored state, as shown in the figure. Please do not put anything in the product if it's not fully assembled. The load will be applied to only a part of the seat, leading to damage. Be sure to use it with the slide poles pulled out, and the entire seat unfolded.
 - ② Do not push the slide poles forcefully or pull them out vigorously. The slide pole stopper may be damaged and cannot be removed.

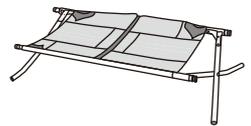

How to Set Up and Disassemble / Please make sure that there are no people or objects nearby. Use the reverse procedure for disassembly.

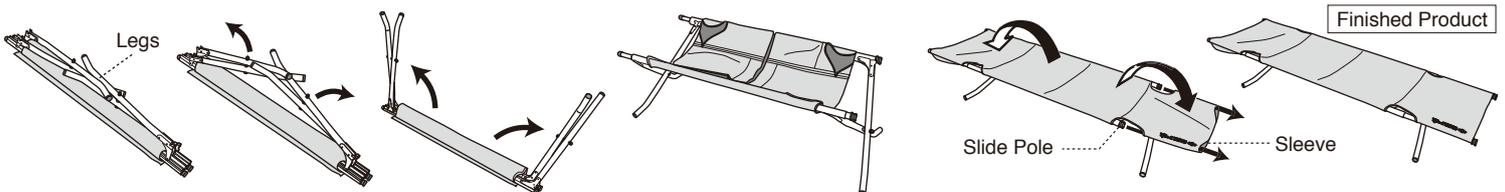

- ① Place the product so the crossed legs are on top. Then, lift the left and right legs apart at the same time. Open the legs wide until they stop.
- ② Open the main body pole so that the crossed legs open and stand upright.
- ③ Open both sides of the folded seat, extend the slide poles stored in the main body pole and pass them through the sleeve of the seat. If the seat is slightly slack, it's easier to assemble. Please insert the slide poles until they stop.

Maintenance

- To remove stains or moisture on the seat cloth, wipe with a cloth soaked in detergent before storing. Dry in a well-ventilated area.

Warranty

Snow Peak guarantees the quality of all its products. Please contact your local Snow Peak dealer if you have any problems with this product. Snow Peak will replace or repair if the product is shown to have manufacture defects. In other instances, Snow Peak may repair at an appropriate fee. Please note, the warranty does not apply under the following conditions: 1. Natural product deterioration over time. / 2. Damage caused by alterations or careless handling. / 3. Damage caused by improper handling prohibited in the instruction manual. / 4. Product failure due to user accidents. / 5. Any damage except due to manufacturing defects. / 6. Damage caused by dirt and rust. / 7. Damage caused by disassembly. / 8. Deformation and damage caused by dropping or other similar incidents. / 9. Product failure due to wear and tear caused by the user. / 10. Damage caused by use with other unrelated products.

Repair

- For repairs, please contact the retailer where you purchased the product or Snow Peak Customer Service.
- When you request a repair, please make sure that the product is dry and clean.
- Please attach a memo or some kind of tag indicating the needed repair and detail when and how the damage occurred.
- Shipping cost and repair fee for the repair will be determined as follows.
 1. Within warranty: Return shipping cost and repair fee will be covered by Snow Peak / 2. Outside warranty: Return shipping cost and repair fee will be covered by the user.

Snow Peak, Inc.

456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp

Snow Peak USA, Inc.

404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com