


SDI-001-1 ペンタイズグランドシート

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、ペンタイズ専用のグランドシートです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容(各部の名称)

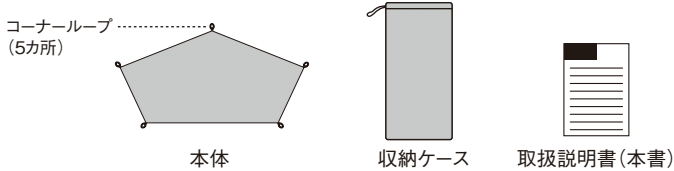

スペック

- 材質：75Dポリエステルタフタ・PUコーティング・耐水圧1,800mmミニマム
- 重量：250g
- サイズ：130×250cm
- 収納ケースサイズ：16×42(h)cm

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。


- このグランドシートの素材は難燃性ではありません。グランドシートの近くでは燃焼式のランタンやコンロ、ヒーターなどの熱源や、マッチ、ローソク、ライター、タバコなど(裸火や炎)は絶対に使用しないでください。
- グランドシートの近くで燃料を保管したり、燃料を補給するなど、引火性のあるものを持ち込まないでください。

⚠ 注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。

- 焚火や花火などのそばで使用したり、設営・撤収をしないでください。火の粉を被り、生地に穴を開けてしまう場合があります。
- 樹液が付着するときれいに除去することができません。樹液が垂れそうな木の下を避けて設営してください。シンナーやベンジン等の有機溶剤により無理に除去しようとすると生地やコーティングを痛めてしまいますのでおやめください。
- 設営・撤収の際は、風に飛ばされないようグランドシートをしっかりと掴んで作業してください。
- 必ずすべてのループを固定して使用してください。
- グランドシートの素材は長時間日光にさらされた場合、退色や生地劣化などの強度低下を起きますので、常設用として使用しないでください。
- 農業などでPUコーティングが破壊され耐水圧が異常低下してしまう場合があります。この症状と判断された場合、製品の保証ができなくなりますのでご注意ください。
- 石や枝などの鋭利な突起物のない、平坦な場所でご使用ください。

使用方法

- ①テント設営場所にグランドシートのPUコーティング面(てかりのある面)が上にくるように敷いてください。
- ②グランドシート上にテントを設営してください。
- ③テントのコーナーをベグダウンする際に、グランドシートのコーナーループを一緒にベグダウンしてください。必ず、全ての固定箇所を留めてからご使用ください。
- 雨天時に使用する場合、グランドシートがテントボトムよりはみ出さない様に設置してください。はみ出して使用しますと、雨水がシート上に溜まり、テントボトムとの間に入り込んでしまいます。

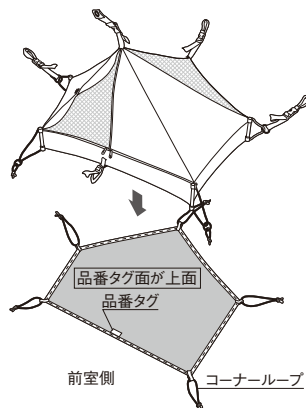

メンテナンス方法


- 濡れたまま保管すると、カビや異臭、生地の色移り、生地の劣化などのトラブルの原因となりますので、使用後は風通しの良い日陰で十分に乾燥し、柔らかいブラシなどで汚れを落としてから保管してください。
- 高温多湿を避け、直射日光の当たらない風通しの良い場所に保管してください。
- ご使用により広範囲にわたり素材が劣化し、耐久度合いを超えたものは修理できない場合があります。
- 樹液が付着してしまうときれいに除去することはできません。樹液が垂れそうな木の下を避けて設営してください。溶剤などにより無理に除去すると生地やコーティングを傷めます。
- 次の使用に備え、付属品も含め、上記の通り十分に保守、点検をしてください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。1. 素材の経年劣化による損害など商品の寿命 / 2. 改造および粗雑な取扱いによる故障 / 3. 取扱説明書で禁止されている取扱いによる故障 / 4. 不測の事故による商品の故障 / 5. その他製造上の欠陥以外による製品の故障 / 6. ゴミやさびによる故障 / 7. 分解したことによる不具合の発生または破損 / 8. 落下やその他の衝撃による部品の変形や破損による不具合 / 9. 摩擦によるパーツの変化及びそれによる故障 / 10. 他社製品との組み合わせによる故障

撤収の手順

- ①テントのベグをすべて引き抜いた後、グランドシートを抜き取ってください。以降、テントの取扱説明書に従って撤収を行ってください。
- ②収納ケースの長さにあわせてグランドシートを折りたたみ収納ケースに入れます。

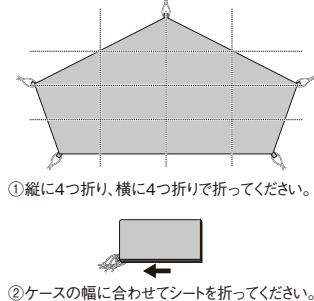

修理について

- 本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。
 - 修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。
 - 修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。
 - 修理品の運賃並びに修理費については以下のように規定させていただきます。
1. 保証対象の場合: 往復運賃並びに修理費は弊社にて負担いたします。
 2. 保証対象以外の場合: 往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、**スノーピークユーザーサービス**
販売店様または弊社ユーザーサービスまで
お問い合わせください。
0120-010-660 (9:00~17:00)
Email: userservice@snowpeak.co.jp


株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
Tel. 0256-46-5858 / Fax. 0256-46-5860
www.snowpeak.co.jp

MADE IN CHINA

SDI-001-1 Penta Ease Groundsheet

Thank you for purchasing a Snow Peak product. This product is a groundsheet especially designed for Penta Ease. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Contents (Name of the Parts)

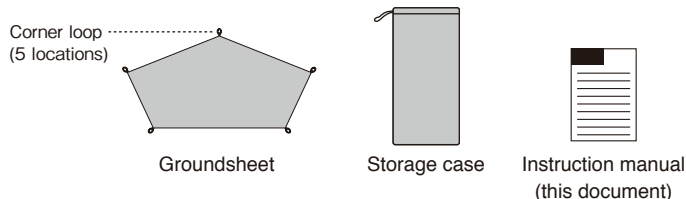

Specifications

- Material: 75D polyester taffeta, PU coating.
- Waterproof rating: 1,800 mm minimum
- Weight: 250g / 8.82 oz
- Size: 130×250cm / 4'3.2"×8'2.4"
- Storage case size: 16×42(h)cm / 6.3"×16.5"

Safety precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

⚠ DANGER Misuse could easily result in a serious accident or death.


- The material of this groundsheet is not flame-proof. Never use combustion-based heat sources such as lanterns, stoves, or heaters, or open flames such as matches, candles, lighters, or cigarettes (naked flame or fire) near the groundsheet.
- Do not keep fuel, or flammable items for replenishing the fuel, near the groundsheet.

⚠ CAUTION Misuse could result in injury to the user and/or property damage.

- Do not assemble, disassemble, or use this product near bonfires or fireworks. Flying sparks can create holes in the fabric.
- If any tree sap adheres to the product, it cannot be completely removed. Do not set up this product under trees that frequently drop sap. If tree sap is forcibly removed using organic solvents such as thinner or benzine, the fabric or coating may be damaged.
- When assembling and disassembling, be sure to hold the groundsheet firmly so that the sheet will not be blown by the wind.
- Be sure to secure all loops before use.
- If the groundsheet is left in the sun for long periods, the materials may fade in color, or the fabric may deteriorate and lose strength. Do not leave the shelter set up permanently.
- The PU coating may be damaged by agricultural chemicals, which cause the water pressure resistance to decrease abnormally. Please note that the product cannot be subject to warranty if damaged by agricultural chemicals.
- Use this product on a flat surface without sharp protrusions such as stones and branches.

How to use

- 1) Place the groundsheet so that its PU-coated side (shiny side) faces up at the tent setup location.
 - 2) Set up the tent on the groundsheet.
 - 3) When pegging down the corners of the tent, peg down the groundsheet corner loops together. Make sure to fasten all fixing points before use.
- If using this groundsheet when it is raining, please install it so that it does not protrude from the bottom of the tent. If the groundsheet is protruding, rainwater will collect on it and enter between the groundsheet and the bottom of the tent.

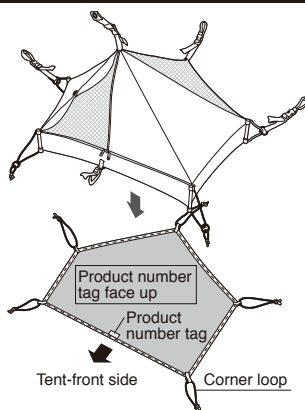

Maintenance


- Before storing, the product should be cleaned and dried. If the product is stored while still wet, it may become moldy, unusual odors may develop, the fabric may become discolored, and/or the material may deteriorate. To prevent this from happening, dry the product sufficiently in a well-ventilated and shaded area, and clean the surface using a soft brush before storing.
- Please store the groundsheet in a well-ventilated area away from direct sunlight, high temperatures, and humid environments.
- Depending on the conditions during use, a wide area of the groundsheet may deteriorate, lose its durability, and/or become irreparable.
- Once sap adheres, it cannot be easily removed. Do not set up this product under trees that frequently drop sap. If the sap is forcibly removed using a solvent, etc., the fabric or coating may be damaged.
- To prepare the product for the next use, be sure to thoroughly maintain and inspect it, including its accessories, as described above.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following: 1. Material deterioration caused by age / 2. Damage caused by modifications or rough handling / 3. Damage caused by inappropriate use not mentioned in the instruction manual / 4. Damage caused by unexpected accidents / 5. Any damage other than defects in the manufacturing process / 6. Damage caused by dust or rust / 7. Damage and defects caused by dismantling the product / 8. Damage and defects caused by dropping, jolting or other shocks / 9. Deterioration or failure of parts due to friction / 10. Damage caused by the use of the product in combination with another manufacturer's products

Disassembly procedure

- 1) After pulling out all the tent pegs, pull out the ground sheet. After that, follow the disassembly procedure described in the instruction manual of the tent.
- 2) Fold the ground sheet to fit the length of the storage case and put it into the storage case.

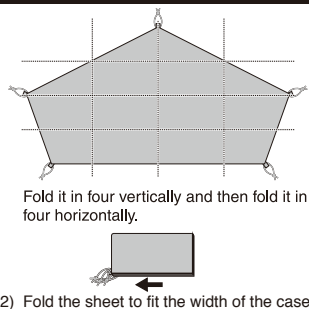

Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
 - When you request repairs, please make sure that the product is dry and clean.
 - Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.
 - Transportation and repair costs are determined as follows.
1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak.
 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

If you have any questions or concerns, please contact your retailer or Snow Peak customer service.

Snow Peak Customer Service
☎ +1(503)461-0781
Email: info@snowpeak.com

Snow Peak USA, Inc. 404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

MADE IN CHINA