

撥水・防水性能について

●本製品はいずれの生地にも撥水加工を施していますが、生地の特性上、撥水性能(撥水の仕方や耐久性)に若干の差が見られる場合があります。また、ご使用を重ねますと撥水性能が低下する場合があります。性能が低下した場合は市販の撥水スプレー等を、それらの説明書をよくお読みの上ご使用ください。●ボトムにはPUコーティングを施していますが、地面の水溜りなどへ長時間接触していると雨水が浸み込む場合があります。●農薬などでPUコーティングが破壊され耐水圧が異常低下してしまう場合があります。この症状と判断された場合、製品の保証が出来なくなりますのでご注意ください。●撥水剤の影響によりロゴマークが剥離する場合がございます。

メンテナンス・保管

●本製品はポリエステル生地を組み合わせて使用しています。生地の特性を考慮し、できる限り色移りし難い加工と配色パターンを採用していますが、保管状態などにより、色移りが発生する場合があります。ご了承ください。また、濡れたままの保管は避けてください。●フレームを通した状態のままで逆さまにしないでください。フレーム折損や生地損傷の原因になります。●フレームは表面の汚れを落とし、十分に乾燥させてから保管してください。濡れたまま保管すると腐食、強度が低下します。ジョイント部分は常に清潔にし、少量のシリコン系潤滑剤を薄く塗布してください。塗布し過ぎると生地に油シミができますのでご注意ください。また、フレーム内部のショックコードは不必要に引っ張らないでください。●フレームを収納する際は、中央を意識しながら折り畳んでください(図J) ●高温多湿を避け、直射日光の当たらない風通しのよい場所に保管してください。●ファスナーに泥や砂、ホコリなどが付着したまま使用すると摩耗し破損の原因になりますので、ブラシなどを使い常に清潔にしてください。また、スライダーの動きを滑らかにするために、少量のシリコン系樹脂剤を定期的に塗布してください。塗布し過ぎると生地に油シミができますのでご注意ください。●小さな生地の破損は市販のリペアテープで補修できます。補修の際はリペアテープの説明書をよくお読みください。●ご使用により広範囲にわたり素材が劣化し、耐久度合を超えたものは修理できない場合があります。●次回の使用に備え、張り綱などの付属品も含め、十分に保守、点検をしてください。●シームテープはPUコーティングが痛まない程度の温度設定で圧着されていますが、使用を重ねるにしたがい剥離してしまう場合があります。剥離が確認された場合は、アイロンを低温に設定し、剥離箇所のみを再度圧着してください。熱を掛け過ぎた場合生地が変色したり劣化が促進されますのでご注意ください。シームテープは無理やり剥離させないでください。PUコーティングが一緒に剥離された場合、修理できなくなる可能性があります。●樹液が付着してしまうときれいに除去することはできません。樹液が垂れそうな木の下を避けて設置してください。溶剤などにより無理に除去すると生地やコーティングを傷めます。●使用する際にフレームが折れてしまった場合は、応急処置として速やかに付属のリペアパイプや添え木をあて、ビニールテープなどで固定するか、撤収をしてください。(図K)

品質保証について

お買い求めいただきました製品は万全を期しますが万一不備な点がございましたら、お買い求めの販売店または弊社までご連絡ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適正な価格で修理させていただきます。修理・交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は保証、修理できない場合もありますので、あらかじめご了承ください。

1.取扱説明書に従わなかったと判断した場合。	6.ゴミやサビによる故障。
2.素材の経年劣化による製品の寿命。	7.分解したことによる不具合の発生または破損。
3.改造及び粗雑な扱いによる製品の故障。	8.落下やその他の衝撃による部品の变形や破損による不具合。
4.不測の事故による製品の故障。	9.消耗品の劣化、破損、故障及び付随する不具合。
5.その他製造上の欠陥以外による製品の故障。	10.他社製品との組合せによる故障。

修理について

●本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。●修理品の運賃並びに修理費については以下のように規定させていただきます。

1.保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。
2.保証対象以外の場合:往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。	スノーピークユーザーサービス ☎0120-010-660 (9:00~17:00) Email:userservice@snowpeak.co.jp	株式会社スノーピーク 〒955-0147 新潟県三条市中野原456 Tel.0256-46-5858 Fax.0256-46-5860 www.snowpeak.co.jp
--	---	---

Water-Repellent and Water-Proof Functions

●We use high-quality water-repellent finish for this product, however, due to the materials' characteristics, their water-repellent capacity (the level of and their durability thereof) may vary slightly. Also the water-repellent finish will lose its level of effectiveness after repeated use. When the materials' capacity to repel water decreases, please use a water-repellent spray which can be purchased on the open market. When using such sprays, please follow the product's instructions. ●Materials with a high water-proof capacity are used in this product; however if the material comes into contact with pools of water for a long period of time, the water may seep into the material leaving a discolored spot. ●Agricultural chemicals may damage the PU coating and decrease the water-proof capacity. If this is the case, it will be beyond our guarantee. ●It is possible that some water-repellent sprays may cause the logo and other markings to peel-off.

Maintenance & Storage

●A combination of Polyester rip stop and Taffeta is used for this product. Taking the material's characteristics into consideration, we adopted processing and color patterns which will cause less color fade, however, depending on storage conditions, slight color fade may occur. Do not store the product if it is wet. After use in any weather condition hang the tent to dry and air out before storing. ●Do not place the tent upside down while the tent is constructed. This may damage the frame or tent material. ●Clean and dry the surface of the poles before storing. If left wet, corrosion may occur, resulting in strength deterioration. Keep the joints clean and apply small amounts of silicone lubricant. Applying too much lubricant will stain the cloth. Also the shock cord inside the frame should not be pulled unnecessarily. ●Fold the frame from the center to the edge.(Fig.J) ●Store the product in a dark, well ventilated area, away from heat and moisture. ●Clean the fastener with a brush before use. Apply small amounts of a silicone lubricant agent on a regular basis in order to allow for the smooth movement of the slider. Do not apply too much lubricant as it will leave stains on the cloth. ●Slight damage to the cloth can be repaired with repair tape available on the market. Refer to the instructions for the use of such repair tape. ●Depending on the conditions of use, the material may deteriorate over time and large areas may lose its durability to such an extent that it is beyond repair. ●For future use, regularly inspect and maintain the product including the accessories such as the pegs. ●Seam tape is attached at a temperature which does not damage the PU coating but with repeated use may peel off the PU coating. If you find the PU coating is peeling off, use an iron at low temperature to apply the PU coating again. If the iron is too hot, it may discolor the cloth and cause material to deteriorate sooner. Do not peel-off the seam tape forcibly. If PU coating is peeled off, it may become beyond repair. ●If tree sap comes into contact with the product, it can't be cleaned off. Refrain from setting up the product under trees with sap. The materials and/or the coating of the materials may be damaged if tree sap is removed using a solvent. ●If the frame is broken, use a repair pipe or splint and fix with vinyl tape.(Fig.K)

Warranty

Snow Peak guarantees its products against manufacture defects. We have made every effort to insure our products are free from any defect or flaws. In the rare event that you feel this product has a defect or needs repair please contact the Snow Peak customer service or go to your local Snow Peak dealer where you purchased this product. Snow Peak will replace or repair any defect that may have been caused due to manufacturing. Snow Peak will not be able to replace this product if any damages occurred due to any of the following:

- | | |
|--|---|
| 1.Damage due to improper handling which is prohibited as shown in instruction. | 6. Damage by dirt and rust. |
| 2.Damage by altering or careless handling. | 7. Damage by dismantling. |
| 3.Material quality has changed due to aging of product. | 8. Deformation and failure of parts damaged by dropping or other similar incidents. |
| 4.Product failure due to user accidents. | 9. Product failure due to wear and tear by user. |
| 5.Any damage except with product defects due to manufacturing. | 10. Damage caused by improper use with other products. |

Repair

●For repairs, please contact the retailer where you purchased the product or Snow Peak user service. ●When you ask for repair, please make sure that the product is dry and clean. ●Please attach a memo or some kind of tag indicating the needed repair and also please write details of when and how the damaged occurred. ●We set for the shipping cost and repair fee for the repair as follows.

1. Within warranty: Return shipping cost and repair fee will be covered by Snow Peak.
2. Outside warranty: Return shipping cost and repair fee will be covered by the user.

Snow Peak Inc. A Corporation of Japan
410 NW 14th Ave., Portland Oregon, 97209, USA
Tel. +1-503-697-3330 Fax. +1-503-699-1396
www.snowpeak.com



Fal Pro.air 3

SSD-703 ファル Pro.air 3

フライシートにフレームスリーブが一体となった構造で、スピード設営が可能な3人用テントです。インナーを取り外せばシェルターとしても使用できます。

○材質:フライシート/20Dシリコンポリエステルミニリップストップ・PUコーティング耐水圧1,500mm、インナーウォール/20Dポリエステルミニリップストップ、ボトム/30Dナイロンリップストップ・PUコーティング耐水圧1,500mm、フレーム/ジュラルミンA7001(φ9mm) ○セット内容:テント本体、本体フレーム(×2)、自在付きロープ(2.9m×4)、ジュラルミンV型ペグ(×11)、リペアパイプ、本体ケース、フレームケース、ペグケース ○収納ケースサイズ:φ17×35cm(本体ケース)、11×51cm(フレームケース) ○重量:1,920g(本体・フレームのみ)

○対応人数
3名

(室内サイズ)
210cm
150cm
103cm



不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。
スノーピークユーザーサービス
☎0120-010-660 (9:00~17:00)
Email:userservice@snowpeak.co.jp


株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
Tel. 0256-46-5858 Fax. 0256-46-5860
www.snowpeak.co.jp




SSD-703 ファル Pro.air 3

このたびはスノーピーク製品をお買い上げいただき誠にありがとうございます。この商品はキャンプ用テントです。安全にご使用いただくためにも必ずこの取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。製品には万全を期しておりますが、フィールドでご使用する前に安全な場所で組立、取扱い方法及び付属品の確認をしてください。説明内容で理解できない点及び製品に不具合が確認された際には、直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

■セット内容

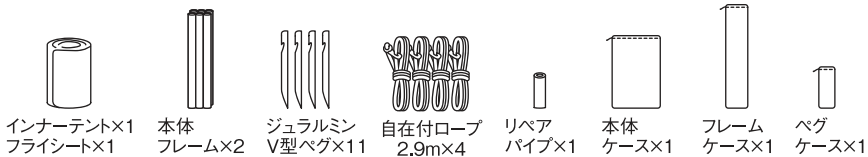

■部分名称

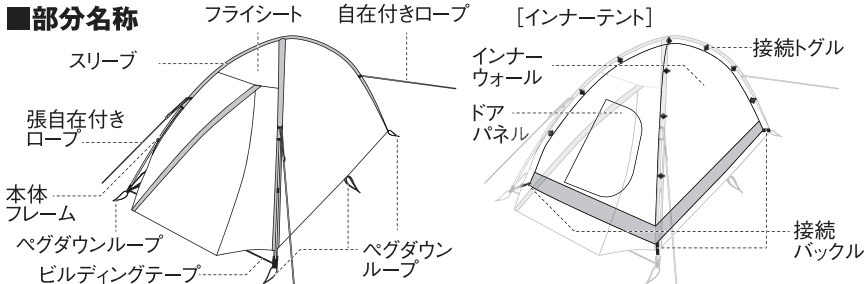

ご使用の前に よく読んで予測される事故を回避し安全にご使用ください。

危険 明らかに生命にかかわる重大な事故が予測される行為を示します。

警告 場合により重大な事故に至る行為を示します。

注意 ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。

取扱上の注意

危険 明らかに生命にかかわる重大な事故が予測される行為を示します。

- このテントの素材は難燃性ではありません。テント内では燃焼式のランタンやコンロ、ヒーターなどの熱源や、マッチ、ローソク、ライター、タバコなど裸火や炎は絶対に使用しないでください。限られた空間での火気の使用は火災や酸欠、一酸化炭素中毒などの恐れがあり大変危険です。
- テント内で燃料を保管したり、燃料を補給するなど、引火性のあるものを持ち込まないでください。

警告 場合により重大な事故に至る行為を示します。

- 気象状況には常に細心の注意を払い、風の強い時や悪天候が予想されるときは速やかにテント泊を中止して安全な場所へ避難してください。
- 高温に加熱されたものや発熱性のあるものを持ち込まないでください。天候によりテント内は高温になり、熱中症などの危険があります。
- 風の吹き抜けるような場所や、雪崩、がけ崩れ、急な出水などの恐れのない地盤のしっかりとした、水はけの良い平坦な場所を選んで設営してください。

注意 ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。


- 日差しによりフライシート表面は低温やけどに発展するほどの高温になります。十分にご注意ください。
- 焚火や花火などのそばで組み立てたり、使用しないでください。火の粉を被り、生地に穴をあけてしまう場合があります。
- テントの設営・撤収の際は、フレームをしっかりと掴んで作業してください。フレームの先端がハネ返るなどして思わぬ事故になりますので、近くに人がいないかなど、周囲の安全を確認してください。
- 張り綱でしっかりとテントを固定してください。
- テントの素材は長時間日光にさらされた場合、退色や生地劣化などの強度低下を起こしますので、常設用として使用しないでください。

設営の手順



- ①フライシートを平らな場所に広げ、ビルディングテープが接続されている事を確認してください。
- ②本体フレームを伸ばし、接続部分をしっかりと連結します。※接続部分にすき間ができないように、しっかりと差し込んでください。
- ③片方のスリーブにフレームを差し込みます。スリーブの末端は袋状になっているので、フレームが止まるまで入れ込んでください。このとき、フレームが最後まで入っていることを確認してください。(図A)
- ④フレームが末端で止まったら、フレームのもう一端をフレーム受けポケットに差し込みます。(図B)
- ⑤もう1本のフレームも③④同様に設営します。※フレームの設営は1本ずつ行ってください。
- ⑥フライシートが自立したらベルクロ(図C)をフレームに留めます。
- ⑦フライシートの中に入り、インナーテントを接続します。接続する順番は奥から手前に向かって順に行ってください。(図D、E)
- ⑧●テントコーナー4箇所、■フライシートフロント2箇所、▲フライシートバック1箇所、★張り綱4箇所の順番で、ペグもしくは岩などで固定します。(図F)※重要な固定箇所は★張り綱の4箇所ですが、基本的には●■▲の箇所も固定する様にしてください。

※2回目以降の設営では設営を素早く行うために初回の撤収時インナーを取り外さずに収納することもできます。

図A、B、C

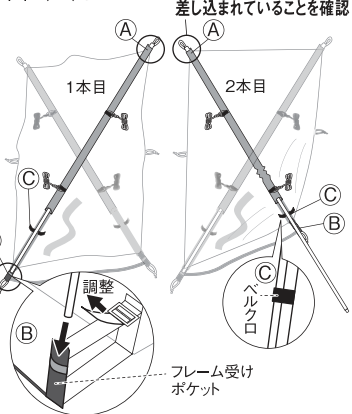


図D、E

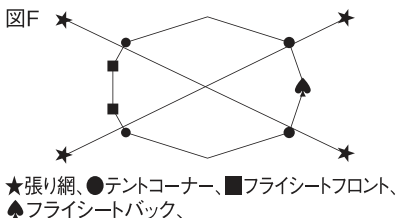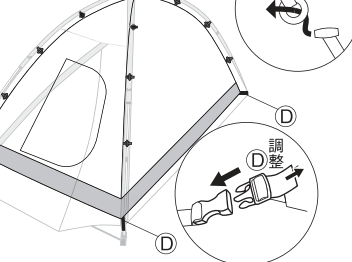


SSD-703 FAL Pro.air 3

Thank you for purchasing this Snow Peak product. This product is a mountaineering tent. Please read the instructions carefully before use, and keep for future reference. Make sure you fully understand the instructions before use in the field. If the product is damaged upon purchase please stop using it immediately and contact Snow Peak customer service or the Snow Peak Dealer you purchased this product from.

■contents

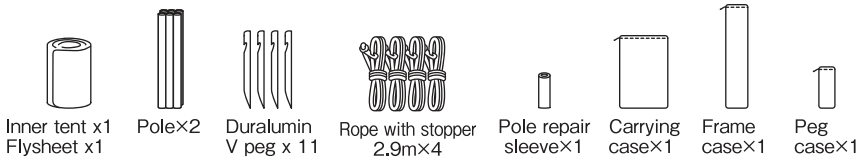

■name of parts

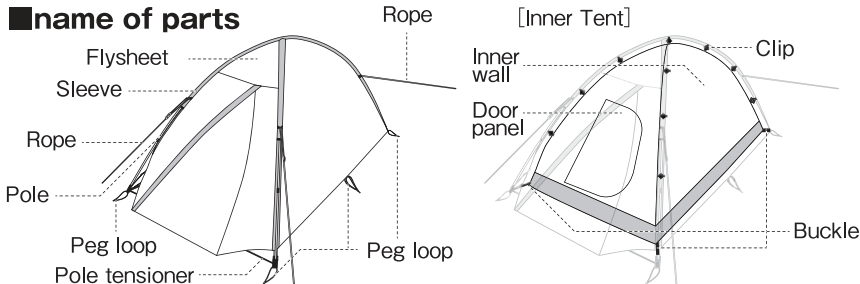

Precautions Before Use Please read this instruction carefully to avoid any incident which may happen if this product is used incorrectly. Regarding the warnings in this instruction manual.

Danger This action could result in a major accident which may lead to death.

Warning This action could result in death or serious injury to the user.

Attention This action could result in severe injury or damage to product or other property.

For your safety, carefully read instructions before use.

Danger This action could result in a major accident which may lead to death.

- The tent material is not flame-proof. Do not use combustion based heat sources such as lanterns, stoves or heaters, or open flames such as matches, candles, lighters or cigarettes inside the tent. The use of such combustion based heat or light sources inside the small closed space is very dangerous and may result in fire, oxygen deficiency or carbon monoxide poisoning.
- Do not keep fuel inside the tent or bring in flammable items for replenishing fuel.

Warning This action could result in death or serious injury to the user.

- Pay close attention to the weather, if bad weather is forecasted, pack up camp and evacuate to a safe place.
- Do not bring in heated items into tent when they are at high temperatures or eutermic items.
- Choose a well-drained flat area with firm ground where there is no chance of high wind gusts, avalanches, landslides or sudden flooding.

Attention This action could result in severe injury or damage to product or other property.

- The flysheet can become very hot by sunlight which could result in a low temperature burn. Please be careful.
- Do not set-up tent near open fires or fireworks. Sparks and embers may come into contact with the tent causing holes or other damage to the material.
- Hold the frames firmly when installing and pulling down the tent. The edge of the frames may bounce and could cause injury. Make sure to keep a distance from other people to ensure safety.
- When in use, the product should be firmly fixed with pegs and tensioning lines.
- When the tent material is exposed to the sun light for long periods of time, color degradation or strength deterioration such as material deterioration may occur. Do not use the product as a permanent setting.

Procedure of setting up tent

- ①Spread the fly sheet on a flat ground and make sure the pole tensioners are connected to the tent.
- ②Assemble the poles. Make sure each section is snapped into the other without a gap.
- ③Take one pole and insert it into a sleeve. Place the end of the pole into the short pole sleeve. Confirm the end of the pole is properly insert to the bottom of the pocket. (Fig. A)
- ④Place the other end of the pole into the short pole sleeve. (Fig. B)
- ⑤Repeat with the other pole as ③ and ④ . ※ Setup the poles one by one.(Fig. C)
- ⑥Get inside the flysheet and connect the inner tent starting from the back. (Fig. D, E)
- ⑦Peg out these points: ●Tent corner x4, ■Flysheet front x2, ▲Flysheet back x1, ★Rope x4 (Fig. F). Pegging out ★ points is the most important. But don't forget to peg out ●, ■ and ▲ points.

※You can fold and store the flysheet with the inner tent attached.

Fig.A、B、C

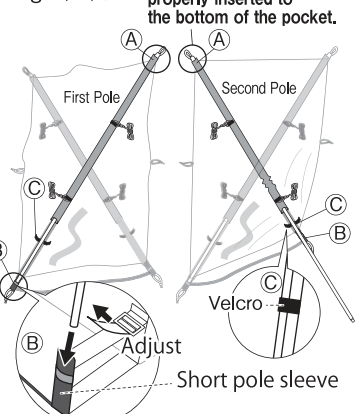


Fig.D、E

