

TM-381 / TM-382 ピクニックラグ M / L

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、ピクニック用レジャーシートです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容(各部の名称)



本体 グロメット 収納ケース 取扱説明書(本書)

※本製品にはベグはセットされておりません。

R-130 アルミフィンガーベグ 10本セットをご使用ください。

スペック

- 材質:本体表生地 / 66Dポリエステルタフタ・PUコーティング耐水圧450mmミニマム・撥水加工
本体裏生地 / 150Dポリエステルオックス・PUコーティング耐水圧1,200mmミニマム・撥水加工
本体中綿 / ポリエステル
収納ケース表生地 / 66Dポリエステルタフタ・PUコーティング耐水圧450mmミニマム・撥水加工
収納ケース裏生地 / 150Dポリエステルオックス・PUコーティング耐水圧1,200mmミニマム・撥水加工
収納ケース中綿 / ポリエステル
- サイズ:TM-381 / 200×140×1(h)cm、TM-382 / 197×197×1(h)cm
- 収納サイズ:TM-381 / 37×15×27(h)cm、TM-382 / 37×15×36(h)cm
- 重量:TM-381 / 860g、TM-382 / 1.3kg

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

●本製品の素材は難燃性ではありません。本製品の近くでは燃焼式のランタンやコンロ、ヒーターなどの熱源や、マッチ、ローソク、ライター、タバコなど(裸火や炎)は絶対に使用しないでください。●本製品の近くで燃料を保管したり、燃料を補給するなど、引火性のあるものを使用しないでください。

⚠ 警告 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。


●ご使用前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。●気象状況には常に細心の注意を払い、風の強い時や悪天候が予想されるときは速やかに撤収して安全な場所へ避難してください。●高温に加熱されたものや発熱性のあるものを本製品の上で使用しないでください。火災などの危険があります。●風の吹き抜けるような場所や、雪崩、がけ崩れ、急な洪水や氾濫などのおそれのない地盤のしっかりとした、水はけの良い平坦な場所を選んで設置してください。

⚠ 注意 ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。

●本製品は屋外での一時的な休憩用です。本来の用途以外に使用しないでください。●本製品は常設用ではありません。製品の素材は長時間日光にさらされた場合、退色や生地劣化などの強度低下を起こしますので、常設用として使用しないでください。●日差しにより製品の表面は低温やけどに発展するほどの高温になります。十分ご注意ください。●角のある石や折れた木の枝など鋭利なもののない平坦な場所で使用してください。●焚火や花火などのそばで組み立てたり、使用しないでください。設置・撤収の際には、周囲に火気がないことを確認してください。火の粉を振り、生地に穴を開けてしまう場合があります。●設置・撤収の際は、風に飛ばされないよう製品をしっかり掴んで作業してください。●樹液が付着するとときに除去できません。樹液が垂れそうな木の下を避けて設置してください。シンナーやベンジンなどの有機溶剤により無理に除去しようとすると生地やコーティングを痛めてしまいますのでおやめください。●薬品(農薬、虫よけスプレーなど)が付着するとPUコーティングが破壊され耐水圧が異常低下してしまう場合があります。この症状と判断された場合、製品の保証が出来なくなりますのでご注意ください。●本製品は防水性の高い生地を使用しておりますが、地面の水溜りなどへ長時間接触していると雨水が浸み込む場合があります。●薄い生地を使用していますので、重量物を乗せたり生地を引っ張りすぎると破損するおそれがあります。ご注意ください。●本製品の上で小型テーブルなどを使用する際は、脚部の裏にバリやさくれなど鋭利になっていないか確認してください。また本製品の上で物を引きずらないでください。生地が破れる原因となります。

ご使用方法

- ①本体を表面(ネームロゴのある面)が上に向くように広げてください。
- ②グロメット4箇所をベグで固定してください。
- ③綺麗に折りたたみ、収納ケースに入れてください。

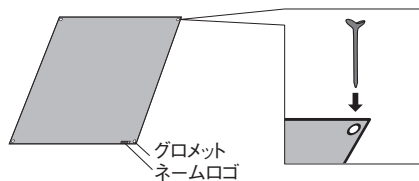

メンテナンスについて

●長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。●本製品は水洗い、ドライクリーニングできません。お手入れの際には水や中性洗剤を使い、固くしぼった布でふき取ってください。●本製品はポリエステル生地を組み合わせで使用しています。生地の特性を考慮し、できる限り色移りし難い加工と配色パターンを採用していますが、保管状態などにより、色移りが発生する場合があります。ご了承ください。●濡れたまま保管すると、カビや悪臭、生地の色移り、生地の劣化などのトラブルの原因になりますので、使用後は風通しの良い日陰で十分に乾燥し、柔らかいブランなどで泥汚れを落としてから保管してください。●高温多湿を避け、直射日光の当たらない風通しのよい場所に保管してください。●ご使用により広範囲にわたり素材が劣化し、耐久度合を超えたものは修理できない場合があります。●次回の使用に備え、付属品も含め、上記の通り十分に保守、点検をしてください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。1.素材の経年劣化による損害など商品の寿命 / 2.改造および粗雑な取扱いによる故障 / 3.取扱説明書で禁止されている取扱いによる故障 / 4.不測の事故による商品の故障 / 5.その他製造上の欠陥以外による製品の故障 / 6.ゴミやさびによる故障 / 7.分解したことによる不具合の発生または破損 / 8.落下やその他の衝撃による部品の变形や破損による不具合 / 9.摩擦によるパーツの変化及びそれによる故障 / 10.他社製品との組み合わせによる故障

修理について

●本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。●修理品の運賃並びに修理費については以下のように規定させていただきます。1.保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。 / 2.保証対象以外の場合:往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、
販売店様または弊社ユーザーサービスまで
お問い合わせください。

スノーピークユーザーサービス
☎0120-010-660 (9:00~17:00)
Email:userservice@snowpeak.co.jp

株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
Tel.0256-46-5858 / Fax.0256-46-5860
www.snowpeak.co.jp

MADE IN CHINA

TM-381 / TM-382 Picnic Rug M / L

Thank you for purchasing a Snow Peak product. This product is a picnic rug. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Contents (Name of the Parts)



* This product does not come with any pegs.
Use with R-130 Aluminum Finger Pegs (10-piece set).

Specifications

- Materials : Main unit front side fabric / 66D Polyester taffeta, PU coating Waterproof rating: 450mm minimum, Water-repellent finish, Main unit back side fabric / 150D Polyester Oxford, PU coating Waterproof rating: 1,200mm minimum, Water-repellent finish, Main unit filling / Polyester, Carrying case front side fabric / 66D Polyester taffeta, PU coating Waterproof rating: 450mm minimum, Water-repellent finish, Carrying case back side fabric / 150D Polyester Oxford, PU coating Waterproof rating: 1,200mm minimum, Water-repellent finish, Carrying case filling / Polyester,
- Size : TM-381 / 200×140×1(h)cm (78.7"×55.1"×0.4"(h)), TM-382 / 197×197×1(h)cm (77.5"×77.5"×0.4"(h))
- Storage size : 37×15×27(h)cm (14.5"×5.9"×10.6"(h)), TM-382 / 37×15×36(h)cm (14.5"×5.9"×14.1"(h))
- Weight : TM-381 / 860g (30.3oz), TM-382 / 1.3kg (45.8oz)

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

⚠ DANGER / Misuse could easily result in a serious accident or death.

- The materials of this product are not flame-retardant. Do not use combustion-based heat sources (such as lanterns, stoves, or heaters) or open flames (such as matches, candles, lighters, or cigarettes) near this product. ●Do not store or replenish fuel near this product, or otherwise use anything flammable near this product.

⚠ WARNING / Misuse could result in serious injury or death.


- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair. ●Pay close attention to the weather. If there are strong winds or extreme weather is in the forecast, pack up camp immediately and evacuate to a safe place. ●Do not use hot items or items that generate heat on this product. It may cause fire, etc. ●Choose a flat, well-drained area with firm ground to set up this product. Choose a place with no chance of avalanches, landslides, or flooding.

⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.

- This product is intended for temporary use for resting outdoors. Do not use this product for any other purposes. ●This product is not for permanent setup. If this product is left in the sun for long periods, the material may fade in color or deteriorate and lose strength. Do not use this product as a permanent setup. ●Sunlight can cause the surface of this product to heat up, potentially causing low-temperature burns. Be especially cautious when handling. ●Use this product on a flat place with no sharp objects such as rocks with sharp edges or broken branches. ●Do not assemble or use this product near a campfire, fireworks, etc. Make sure that there is no fire nearby when setting up or removing this product. Flying sparks can create holes in the fabric. ●When setting up or removing this product, hold it firmly so that it won't be blown away by the wind. ●Do not allow sap to stick to the product, as sap cannot be completely cleaned off. Avoid placing the product under trees that may drip sap. Using organic solvent such as paint thinner and benzene in an attempt to remove sap will damage the material and coating. ●Chemicals (agricultural chemicals, insect repellents, and other substances) may cause the PU coating to break down, which can significantly reduce the product's ability to withstand water pressure. If this occurs, there is no guarantee that the product will function as intended. ●This product uses materials with high waterproof performance. However, if the materials make contact with pools of water on the ground for long periods, water may soak into the material. ●As this product is made of thin fabric, loading it with a heavy object or pulling at it with strong force may cause damage. Be cautious when handling. ●When using a small table on this product, check for any burrs and rough, sharp parts on the back of each leg. Do not drag anything on this product. It may cause the fabric to tear.

Instructions for Use

- ① Spread the rug with the top side (side with logo) facing up.
- ② Use pegs to hold the rug in place at the four grommets.
- ③ Fold the rug neatly when storing in the storage case.

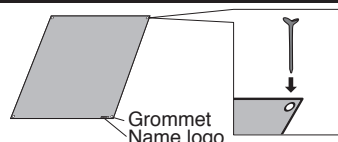

Maintenance

- Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair. ●This product cannot be washed with water or dry cleaned. To clean this product, wipe away any dirt with a well-wrung damp cloth, using water or mild detergent. ●A combination of polyester materials is used in this product. In designing this product, we took the material characteristics into consideration and adopted processing and color patterns that will result in less color migration. However, slight color migration may occur depending on storage conditions. Please note that beforehand. Do not store the product while it is wet. ●Storing the product while it is still wet can result in issues such as mold buildup, bad odors, color migration, and material deterioration. After using the product, dry it sufficiently in a well-ventilated and shaded area and clean the surface with a soft brush before storing. ●Store the product in a well-ventilated area outside of direct sunlight, and away from heat and moisture. ●The material may deteriorate over a wide area depending on use. Products with reduced durability may not be repairable. ●Carefully maintain and inspect the product (including accessories) as per the above instructions in preparation for the next time the product will be used.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following: 1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by inappropriate use not mentioned in the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage and defects caused by dismantling the product. / 8. Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with another manufacturer's products.

Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service. ●When you request repairs, please make sure that the product is dry and clean. ●Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred. ●Transportation and repair costs are determined as follows: 1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak. / 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

Snow Peak USA, Inc.

404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.

456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp